




Operating & ATEX/IECEx Safety Instructions

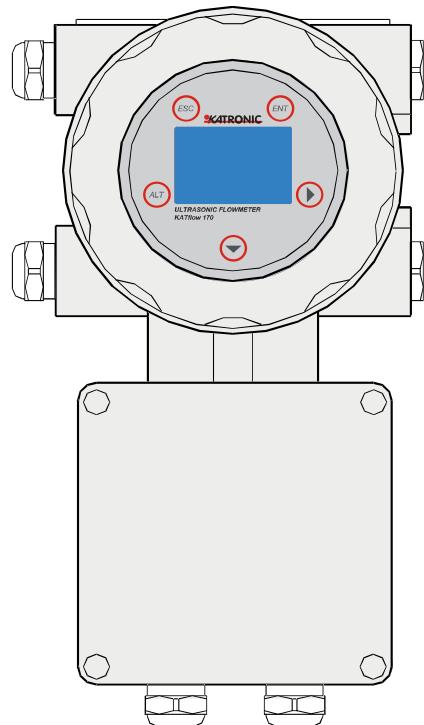

Ultrasonic Flowmeter KATflow 170

Aluminium and stainless steel enclosures (Aluminium illustrated above)

U-F-M / Ultrasonic Flow Management

Argon 17
4751 XC Oud Gastel
The Netherlands

Tel. +31 (0) 165 855 655

Internet www.U-F-M.nl
E-mail info@u-f-m.nl

Operating & ATEX/IECEx

Safety Instructions

KATflow 170

Version V15E0913

Copyright © 2013

All rights reserved.

KATflow 170

Operating and ATEX/IECEx Safety Instructions

Table of Contents

	Page
1 Safety instructions.....	5
1.1 Symbols used in these operating instructions.....	5
1.2 Safety instructions for the operator.....	6
1.3 Languages/translations.....	6
1.4 Warranty.....	6
1.5 Return policy.....	6
1.6 Legislative requirements.....	7
1 Introduction.....	8
1.1 System configuration.....	9
1.2 Approvals.....	9
1.2.1 Clamp-on ultrasonic sensors.....	9
1.2.2 Flowmeter.....	10
1.3 Temperature Limits.....	11
1.3.1 Clamp-on ultrasonic sensors.....	11
1.3.2 Flowmeter.....	11
1.4 Special conditions of safe use.....	11
1.5 EC type examination certificates.....	11
2 Installation.....	12
2.1 Unpacking and storage.....	12
2.1.1 Unpacking.....	12
2.1.2 Storage.....	12
2.1.3 Identification of components.....	12
2.2 Clamp-on sensor installation.....	12
2.3 Installation location.....	13
2.4 Pipe preparation.....	16
2.5 Clamp-on sensor mounting configurations and separation distance.....	16
2.6 Sensor installation in hazardous areas.....	17
2.7 Flowmeter installation in hazardous areas.....	17
2.7.1 2" pipe mounting.....	18
3 Electrical installation.....	19
3.1 Cabling and junction box.....	20
3.1.1 Signal cable parameters.....	20
3.2 Cable glands.....	20
3.3 Equipotential bonding.....	21
3.3.1 Clamp-on ultrasonic sensors.....	21
3.3.2 Flowmeter.....	21
3.4 Process inputs/outputs.....	21
3.5 Clamp-on sensor mounting.....	21
3.5.1 Sensor pipe mounting configurations.....	21
3.5.2 Acoustic coupling gel.....	22
3.5.3 Correct positioning of the sensors.....	22
3.5.4 Sensor mounting with tension straps.....	23
4 Operation.....	24
4.1 Switching On/Off.....	24
4.2 Keypad and display.....	24
4.2.1 Keypad key functions.....	24

4.2.2 Display functions.....	25
4.3 Quick setup wizard.....	26
4.4 Measurements.....	28
4.4.1 Main process value (PV).....	28
4.4.2 Three Line display.....	28
4.4.3 Diagnostic displays.....	29
4.4.4 Totalisers.....	29
4.4.5 Dual channel display mode.....	29
4.4.6 Math display.....	30
4.4.7 Datalogger.....	30
5 Commissioning.....	31
5.1 Menu structure.....	31
5.2 Diagnostics [where specified].....	35
5.3 Display settings.....	35
5.4 Output configuration.....	36
5.4.1 Serial interface RS 232.....	36
5.4.2 Serial interface RS 485.....	36
5.4.3 Modbus RTU.....	36
5.4.4 HART output.....	36
5.4.5 Analogue current output 0/4 ... 20 mA.....	37
5.4.6 Analogue voltage output 0 ... 10 V.....	37
5.4.7 Analogue frequency output	37
5.4.8 Digital open collector output.....	38
5.4.9 Digital relay output.....	38
5.5 Input configuration.....	38
5.5.1 PT100 inputs.....	38
5.5.2 Analogue current input 0/4 ... 20 mA.....	39
5.6 Temperature compensation (TC) – [where installed].....	39
5.7 Sound velocity measurement (SVM).....	39
5.8 Dual-channel flow calculations (maths functions).....	40
5.9 Scope functions.....	40
6 Maintenance.....	41
6.1 Opening/closing the KF170 Ex d compartment.....	41
6.2 Service/Repair.....	41
7 Troubleshooting.....	42
8 Technical data.....	44
9 Specification.....	49
10 Index.....	52
Appendix A	53
Appendix B	54

1 Safety instructions

1.1 Symbols used in these operating instructions

Danger



This symbol represents an immediate hazardous situation which could result in **serious injury, death or damage to the equipment**. Where this symbol is shown, do not use the equipment further unless you have fully understood the nature of the hazard and have taken the required precautions.

Danger



This warning refers to an immediate danger when using the equipment in a hazardous area.

Attention



This symbol indicates important instructions which should be respected in order to avoid damaging or destroying the equipment. Follow the the precautions given in these instructions to avoid the hazard. Call our service team if necessary.



Call service

Where this symbol is shown call our service team for advice if necessary.



Note

This symbol indicates a note or detailed set-up tip.



Information point.

<BRK>

Operator keys are printed in bold typeface and placed in pointed brackets.

1.2 Safety instructions for the operator

These safety instructions are applicable for sensor type K1Ex/K4Ex and KF170 transmitter installations in hazardous areas.



- Do not install, operate or maintain this flowmeter without reading, understanding and following the operating instructions, otherwise injury or damage may result.
- Study these operating instructions carefully before the installation of the equipment and keep them for future reference.
- Observe all warnings, notes and instructions as marked on the packaging of the equipment and detailed in the operating instructions.
- Do not change or alter the sensors or the transmitter. Unauthorized changes may affect the explosion safety of the equipment.
- The special conditions of use as described in the EC type examination certificate must be followed. In addition, all given electrical specifications must be met.
- The electrical installation must be in accordance with applicable national standards (equivalent to IEC 364) in addition to the requirements for installation in hazardous areas according to EN/IEC 60079-14 "Electrical installations in hazardous locations" or equivalent national standards.
- Installation, operation, service and maintenance of the equipment must only be performed by authorised and trained personnel with the necessary knowledge and qualifications in explosion safety.
- If the product does not operate normally, please refer to the service and troubleshooting instructions, or contact KATRONIC for help.

1.3 Languages/translations

These safety instructions are compiled in English. If English is not your native language and you have difficulties understanding the content of these instructions, please contact KATRONIC and/or your authorised local distributor for a translation of this text.

1.4 Warranty

- Any product purchased from KATRONIC is warranted in accordance with the relevant product documentation and as specified in the sales contract provided it has been used for the purpose for which it has been designed and operated as outlined in the operating instructions. Misuse of the equipment will immediately revoke any warranty given or implied.
- Responsibility for suitability and intended use of this ultrasonic flowmeter rests solely with the user. Improper installation and operation of the flowmeter may lead to a loss of warranty.
- Please note that there are no operator-serviceable parts inside the equipment. Any unauthorised interference with the product will invalidate the warranty.

1.5 Return policy

If the flowmeter has been diagnosed to be faulty, it can be returned to KATRONIC for repair using the Customer Returns Note (CRN), a copy of which can be found in Appendix B of this manual. KATRONIC regret that for Health & Safety reasons we cannot accept the return of the equipment unless accompanied by the completed CRN.

1.6 Legislative requirements

CE marking

The flowmeter is designed to meet the safety requirements in accordance with sound engineering practice. It has been tested and has left the factory in a condition in which it is safe to operate. The equipment is in conformity with the statutory requirements of the EC directive and complies with applicable regulations and standards for electrical safety EN 61010, hazardous area equipment 94/9 EC (ATEX100a) and electro-magnetic compatibility EN 61326. A CE Declaration of Conformity has been issued in that respect, a copy of which can be found in Appendix B of these operating instructions.

WEEE Directive

The Waste Electrical and Electronic Equipment Directive (WEEE Directive) aims to minimise the impact of electrical and electronic goods on the environment by increasing re-use and recycling and by reducing the amount of WEEE going to landfill. It seeks to achieve this by making producers responsible for financing the collection, treatment, and recovery of waste electrical equipment, and by obliging distributors to allow consumers to return their waste equipment free of charge.



KATRONIC offers its customers the possibility of returning unused and obsolete equipment for correct disposal and recycling. The Dustbin Symbol indicates that when the last user wishes to discard this product, it must be sent to appropriate facilities for recovery and recycling. By not discarding this product along with other household-type waste, the volume of waste sent to incinerators or landfills will be reduced and natural resources will be conserved. Please use the Customer Return Note (CRN) in Appendix B for return to KATRONIC.

RoHS Directive

All products manufactured by KATRONIC are compliant with the relevant aspects of the RoHS Directive.

1 Introduction

Clamp-on transit-time flowmeter

The KATflow 170 is a fixed installation ultrasonic flowmeter designed for use in hazardous areas employing clamp-on sensors for the measurement of liquids in full, enclosed pipes. Flow measurements can be undertaken without interruption of the process or interference with the integrity of the pipeline. The clamp-on sensors are attached to the outside of the pipes. The KATflow 170 uses ultrasonic signals for measurement of the flow, utilising the transit-time method. The sensors of type K1Ex and K4Ex are equally suitable for use in hazardous areas. The KF170 flowmeter can only be used with ATEX or IECEx certified sensors.

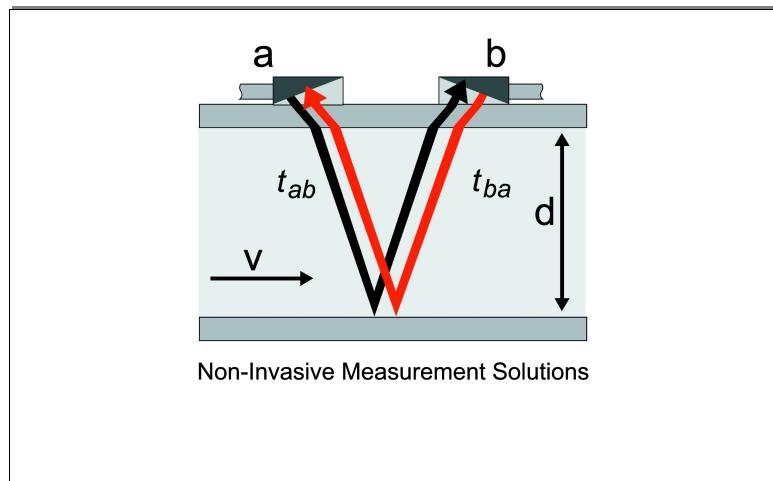


Illustration 1: Clamp-on ultrasonic flowmeter principle

Measuring principle

Ultrasonic signals are emitted by a transducer installed on a pipe and received by a second transducer. These signals are emitted alternately in the direction of flow and against it. Because the medium is flowing, the transit time of the sound signals propagating in the direction of flow is shorter than the transit time of the signal propagating against the direction of flow. The transit-time difference ΔT is measured and allows the determination of the average flow velocity along the path of acoustic propagation. A profile correction is then performed to obtain the average flow velocity over the cross-sectional area of the pipe, which is proportional to the volumetric flow rate.

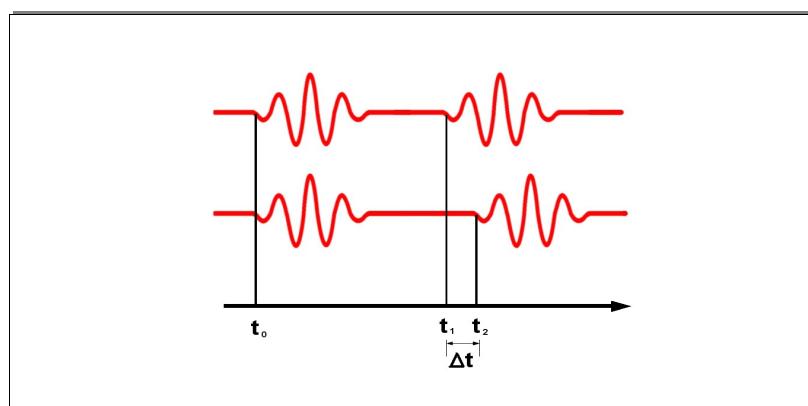


Illustration 2: Transit-time measuring principle

1.1 System configuration



The KF170 flowmeter and K1Ex and/or K4Ex sensors can be installed in Zone 1 or 2 hazardous areas with or without a certified optional junction box depending on the required cable distances. A maximum of 2 sensor pairs can be installed - if two pairs are installed these can be configured either in a 1-pipe dual-path or a 2-pipe single path configuration.

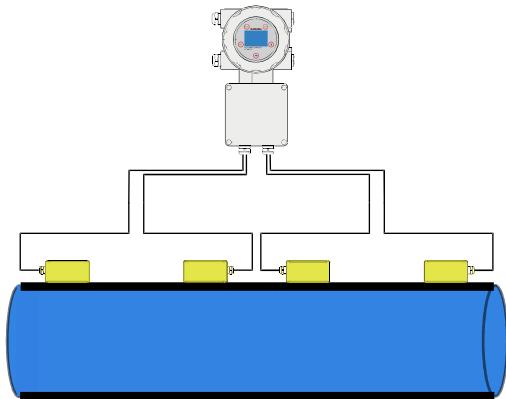


Illustration 3: KF170 with direct sensor connection in a 1-pipe 2-path configuration (Zone 1 or 2)

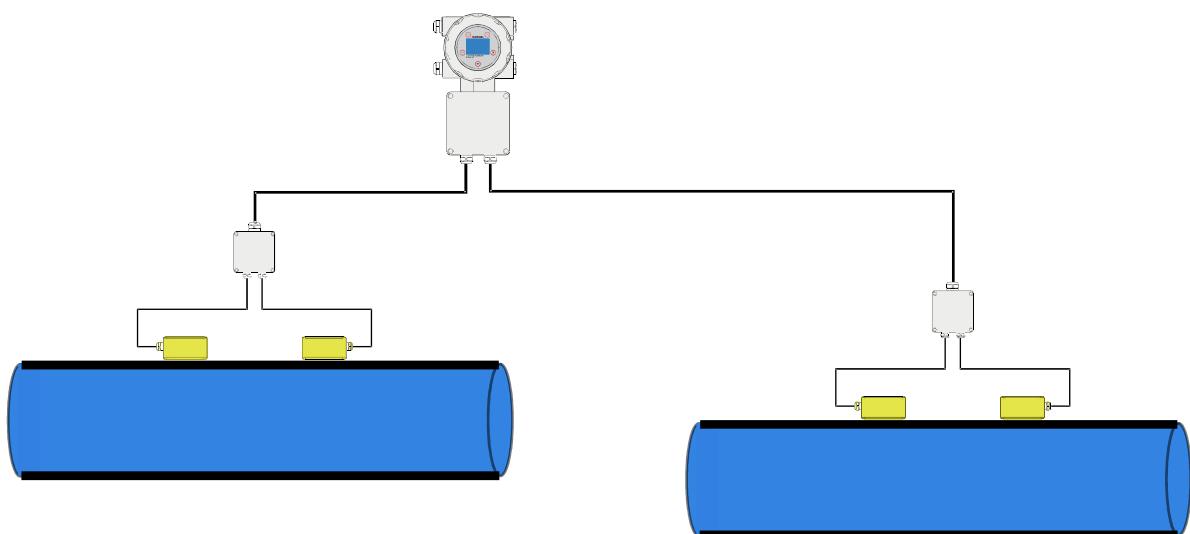


Illustration 4: KF170 2-pipe 1-path configuration using optional junction boxes(Zone 1 and 2)

1.2 Approvals

1.2.1 Clamp-on ultrasonic sensors

The clamp-on ultrasonic sensors are manufactured according to European Directive 94/9/EC (ATEX100a). The equipment is approved for installation and use in hazardous classified areas of Zone 1 and 2 by the certification agency TRaC (ATEX notified body identification 0891). The protection method for the sensors is "encapsulation" as per EN/IEC 60079-18.

The K1Ex, K4Ex transducers meet the requirements of the following standards:

Standard	Description
EN 60079-0 IEC 60079-0	Electrical equipment for use in explosive atmosphere – General requirements
EN 60079-18 IEC 60079-18	Electrical equipment for use in explosive atmosphere – Encapsulation “m”
EN 61241-0 IEC 61241-0	Electrical equipment for use in the presence of combustible dust – General requirements
EN 61241-1 IEC 61241-1	Electrical equipment for use in the presence of combustible dust – Protection by encapsulation “maD, mbD”
EN 61241-18 IEC 61241-18	Electrical equipment for use in the presence of combustible dust – Protection by enclosures “tD”

Certificate number of the K1Ex and K4Ex sensors: **TRAC 09 ATEX 21226 X**

1.2.2 Flowmeter

The KATflow 170 flowmeter is available in epoxy-coated aluminium or in stainless steel. Both versions are certified for use in hazardous area Zone 1 or 2. K1Ex and K4Ex sensors are connected to the KATflow 170 either directly or through an Ex e certified junction box with cables provided by KATRONIC.

The protection method for the KF170 is “explosion-proof” Ex d and “increased safety” Ex e as per the following standards:

Standard	Description
EN 60079-0 IEC 60079-0	Electrical equipment for use in explosive atmosphere – General requirements
EN 60079-1 IEC 60079-1	Electrical equipment for use in explosive atmosphere – Flameproof “d”
EN 60079-7 IEC 60079-7	Electrical equipment for use in explosive atmosphere – Increased safety “e”
EN 61241-0 IEC 61241-0	Electrical equipment for use in the presence of combustible dust – General requirements
EN 61241-1 IEC 61241-1	Electrical equipment for use in the presence of combustible dust – Protection by enclosures “tD”

Certificate of the KF170 transmitter: **EPS 11 ATEX 1355 X**

Certification coding: **II 2G Ex db eb IIA/IIB T6**

Flowmeter certification label:



1.3 Temperature Limits

1.3.1 Clamp-on ultrasonic sensors

The K1Ex and K4Ex clamp-on ultrasonic sensors can be used for the following process temperatures depending on the Temperature Class specified for the application:

Gas groups:

Temperature Class	Process temperature range
T6	-50 ... +75 °C
T5	-50 ... +90 °C
T4	-50 ... +115 °C

Dust groups:

The ambient temperature is the limiting factor but cannot exceed +115 °C therefore the max. temperature designation is T80°C - T120°C.

1.3.2 Flowmeter

For KF170 flowmeters located in Zone 1 or 2 hazardous areas the ambient temperature range is -20 ... 60 °C. The unit is manufactured to a degree of protection of IP 66.

1.4 Special conditions of safe use



- The transducers must only be used in conjunction with a flowmeter unit (e.g. KF170) which conforms to the signal parameters and thermal protection conditions as outlined in the special conditions of safe use.
- The transducers must be securely fixed to the pipe to protect the PEEK surface of the sensors from mechanical impact and electrostatic charging.
- Where the connecting cable may be subject to mechanical damage then the user shall provide additional mechanical protection.
- Clause 7.9.2.1, EN60079-18: The circuitry must be protected from a mains transient fault by fuses and they shall be rated in accordance with IEC 60127 or ANSI/UL 248-1, the fuse time-current characteristic shall ensure that the Continuous Operating Temperature of the encapsulating compound and temperature class are not exceeded and shall have a breaking capacity greater than 1500 A. In addition, the fuses shall be non-resettable and shall only be replaced by opening the enclosure. The separation distance across the fuse shall meet Table 5 of EN60079-11 (met by KF170 electronics).
- Clause 10, EN60079-18: The pulsed supply to the transducers must not exceed 330 V at a maximum frequency of 4 MHz (met by KF170 electronics).

1.5 EC type examination certificates

See ATEX documentation pack.

2 Installation

2.1 Unpacking and storage

2.1.1 Unpacking

Care should be taken when opening the box containing the flowmeter, any markings or warnings shown on the packaging should be observed prior to opening. The following steps should then be taken:

- Unpack the flowmeter in a dry area.
- The flowmeter should be handled with care and not left in an area where it could be subject to physical shocks.
- If using a knife to remove packaging care should be taken not to damage the flowmeter or cables.
- The flowmeter package and contents should be checked against the delivery note supplied and any missing items reported immediately.
- The flowmeter package and contents should be checked for signs of damage during transport and any problems reported immediately.
- The vendor accepts no responsibility for damage or injury caused during the unpacking of the instrumentation supplied.
- Excess packing materials should be either recycled or disposed of in a suitable way.

2.1.2 Storage

If storage is necessary, the flowmeter and sensors should be stored:

- in a secure location,
- away from water and harsh environmental conditions,
- in such a way as to avoid damage,
- small items should be kept together in the bags provided to avoid loss.

2.1.3 Identification of components

The following items are typically supplied (please refer to your delivery note for a detailed description):

- KATflow 170 ultrasonic flowmeter
- Clamp-on sensors (one pair for single channel operation, two pairs for dual channel operation)
- Ex e junction box if not direct sensor connection (one junction box for single channel operation, two junction boxes for dual channel operation)
- Sensor connection cable(s) if not direct sensor connection
- Sensor mounting accessories
- Coupling component
- Operating instructions
- Project and hazardous area documentation
- Calibration certificate(s) (optional)

2.2 Clamp-on sensor installation

The correct selection of the sensor location is crucial for achieving reliable measurements and high accuracy. Measurement must take place on a pipe in which sound can propagate (see Acoustic propagation) and in which a rotationally symmetrical flow profile is fully developed (see Straight pipe lengths).

The correct positioning of the transducers is an essential condition for error-free measurements. It ensures that the sound signal will be received under optimal conditions and evaluated correctly. Because of the variety of applications and the different factors influencing the measurement, there can be no standard solution for the positioning of the transducers.

The correct position of the transducers will be influenced by the following factors:

- diameter, material, lining, wall thickness and general condition of the pipe,
- the medium flowing in the pipe,
- the presence of gas bubbles and solid particles in the medium.

Check that the temperature at the selected location is within the operating temperature range of the transducers (see Specification).

After the sensor location has been selected, make sure that the supplied cable is long enough to reach the flow transmitter mounting location. Ensure that the temperature at the selected location is within the ambient operating temperature range of the flow transmitter (see Specification).

Acoustic propagation Acoustic propagation is achieved when the flowmeter is able to receive sufficient signal from the transmitted ultrasonic pulses. The signals are attenuated in the pipe material, the medium and at each of the interfaces and reflections. External and internal pipe corrosion, solid particles and gas content in the medium contribute heavily to signal attenuation.

Straight pipe lengths Sufficient straight lengths of pipe on the inlet and outlet of the measuring location ensure an axi-symmetrical flow profile in the pipe, which is required for good measurement accuracy. If insufficient straight lengths of pipe are available for your application measurements are still obtainable, but the certainty of the measurement can be reduced.

2.3 Installation location

Select an installation location following the recommendations in Table 1 and try to avoid measuring



- in the vicinity of deformations and defects of the pipe,
- near welding seams,
- where deposits could be building up in the pipe.


For a horizontal pipe:

Select a location where the transducers can be mounted on the side of the pipe, so that the sound waves emitted by the transducers propagate horizontally in the pipe. In this way, the solid particles deposited on the bottom of the pipe and the gas pockets developing at the top will not influence the propagation of the signal.



For a free inlet or outlet pipe section:

Select the measuring point at a location where the pipe cannot run empty.

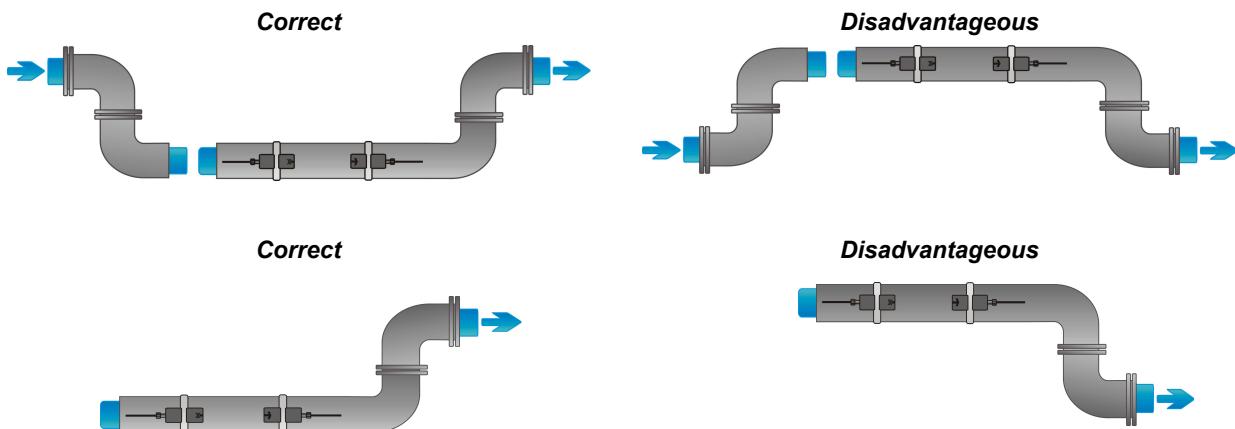**For a vertical pipe:**

Select the measuring point at a location where the liquid flows upward to ensure that the pipe is completely filled.

Correct**Incorrect**

Table 1: Recommendations for sensor mounting location




Look for a sensor installation location with sufficient straight pipe to obtain accurate measurements. Please refer to Table 2 as a guideline for recommended distances from disturbance sources.

Disturbance source: 90°-elbow


Inlet

$L \geq 10D$

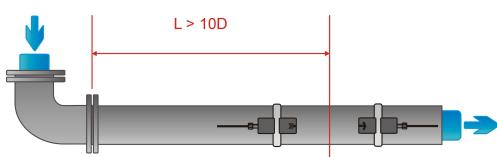


Outlet

$L \geq 5D$

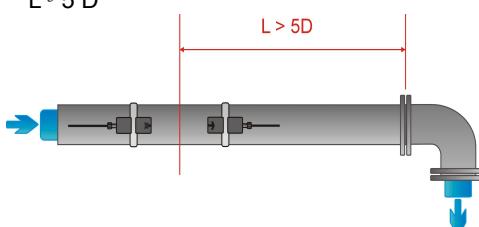**Disturbance source: 2 x 90°-elbows in one plane**


Inlet

$L \geq 25D$

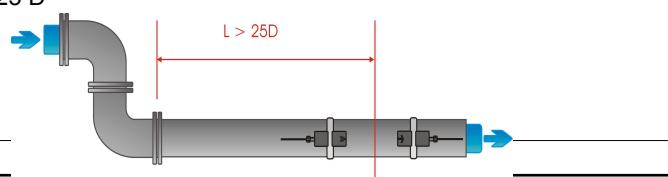

Outlet

$L \geq 5D$

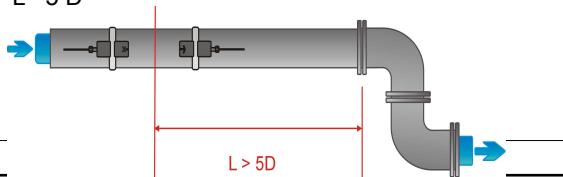

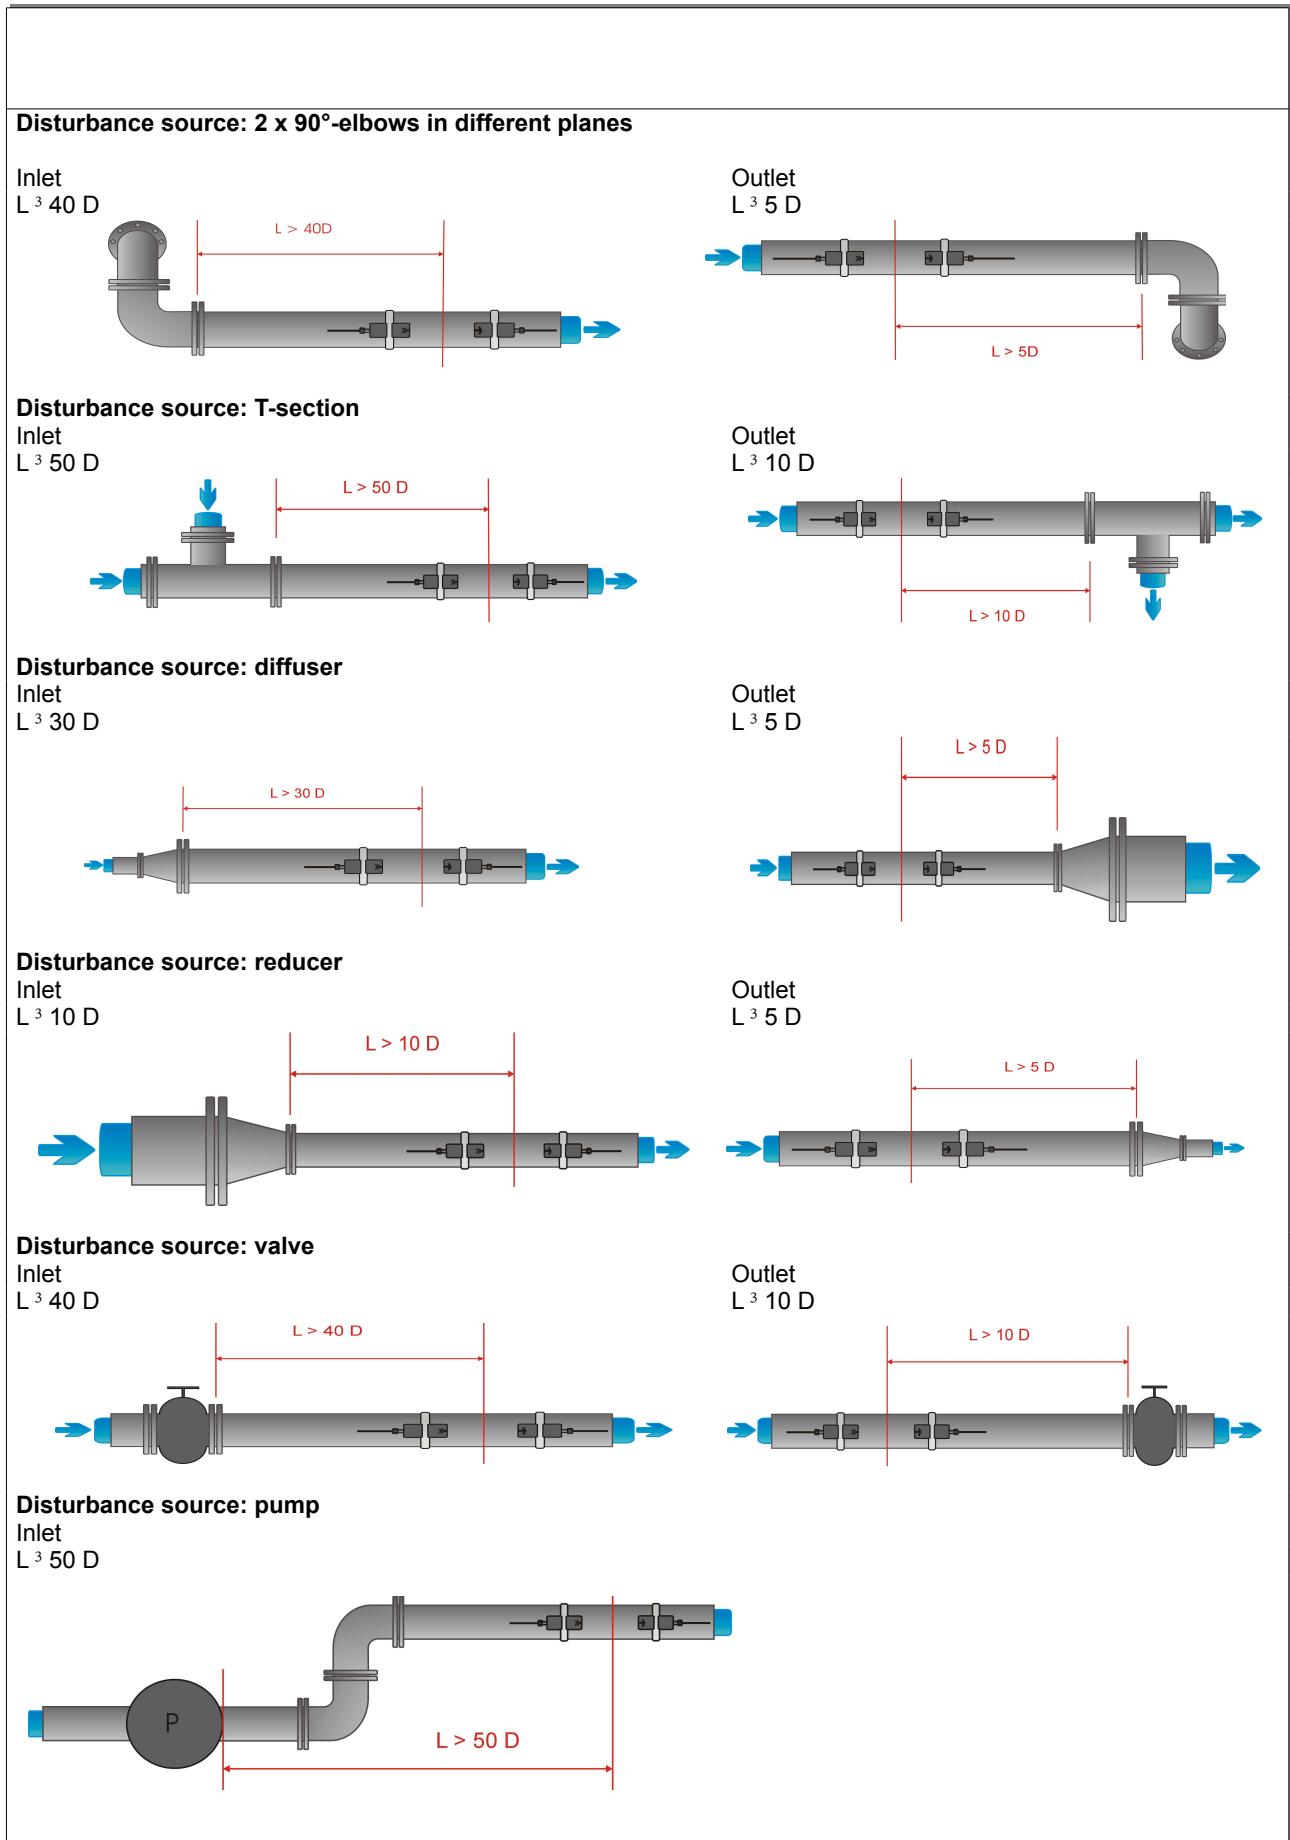


Table 2: Recommended distances from disturbance sources

2.4 Pipe preparation



- Clean dirt and dust from around the area of the pipework where the sensors are to be placed.
- Remove loose paint and rust with a wire brush or file.

Firmly bonded paint does not necessarily need to be removed provided the flowmeter diagnostics indicate sufficient signal strength.

2.5 Clamp-on sensor mounting configurations and separation distance

Reflection Mode

The most common clamp-on sensor mounting configuration is the Reflection Mode, sometimes known as V-Mode (see Illustration 3, sketch (1)). Here, the ultrasonic signal passes twice through the medium (2 signal passes). The Reflection Mode is the most convenient mounting method as the transducer separation distance can be measured easily and the sensors can be accurately aligned. This method should be used whenever possible.

Diagonal Mode

An alternative mounting configuration (Illustration 3, sketch (3)) is the Diagonal mode (Z-Mode). The signals travel only once through the pipe. This method is often used for larger pipes where greater signal attenuation might occur.

Further variation of the Reflection and the Diagonal Modes are possible by altering the number of passes through the pipe. Any even number of passes will require mounting the sensors on the same side of the pipe, while with an odd number of passes, the sensors must be mounted on opposite sides of the pipe. Commonly, for very small pipes, sensor mounting configurations such as 4 passes (W-mode) or 3 passes (N-mode) are used (Illustration 3, sketch (2)).

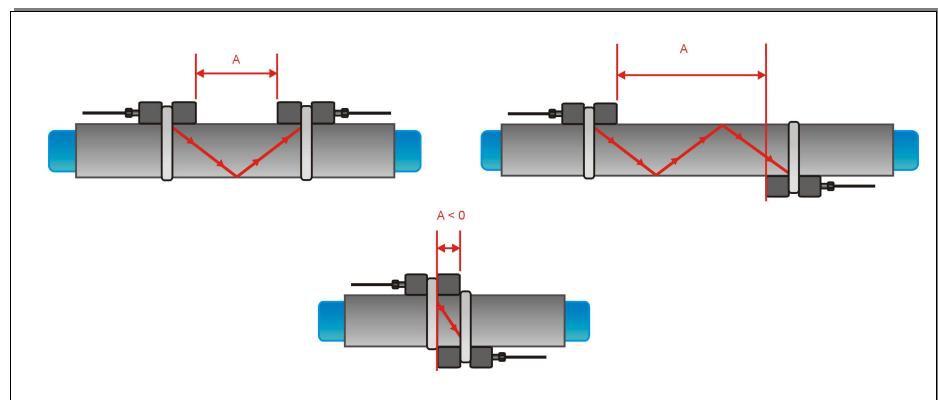


Illustration 5: Clamp-on sensor mounting configurations and sensor spacing

Transducer separation distance

The transducer separation distance A is measured from the inside edges of the sensor heads as shown in illustration 3. It is automatically calculated by the flowmeter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes.

Sensor spacing



A negative separation distance $A < 0$ can occur for mounting configurations on small pipes where diagonal mode operation has been selected (see Illustration 3, sketch (3)). Negative separation distances may be suggested for reflection mode installations, but are not possible. In these cases, use diagonal mode or a larger number of passes.

2.6 Sensor installation in hazardous areas

**DANGER**

The transducers must be securely fixed to the pipe to protect the PEEK surface of the sensors from mechanical impact and electrostatic charging.



Illustration 6: Sensor mounting with tension straps and clamps

2.7 Flowmeter installation in hazardous areas

2.7.1 2" pipe mounting

The KATflow 170 is intended for 2" mounting pole installations as shown in the following picture. Wall mounting is also possible but requires an optional bracket.

Flowmeter 2" pipe pole mounting

Illustration 7: 2" pipe mounted KF170



Flowmeter outline dimensions

Illustration 8: KF170 Outline dimensions

3 Electrical installation

The wiring of the equipment must be in accordance with the requirements as specified in the relevant national or international standard for electrical installations in hazardous areas, e.g. EN/IEC 60079-14. Section 9 (wiring systems) of this standard applies to all protection concepts. Section 10 (additional requirements for protection concept "a" - explosion-proof enclosures) and section 11 (additional requirements for protection concept "e" - increased safety).

Electrical wiring

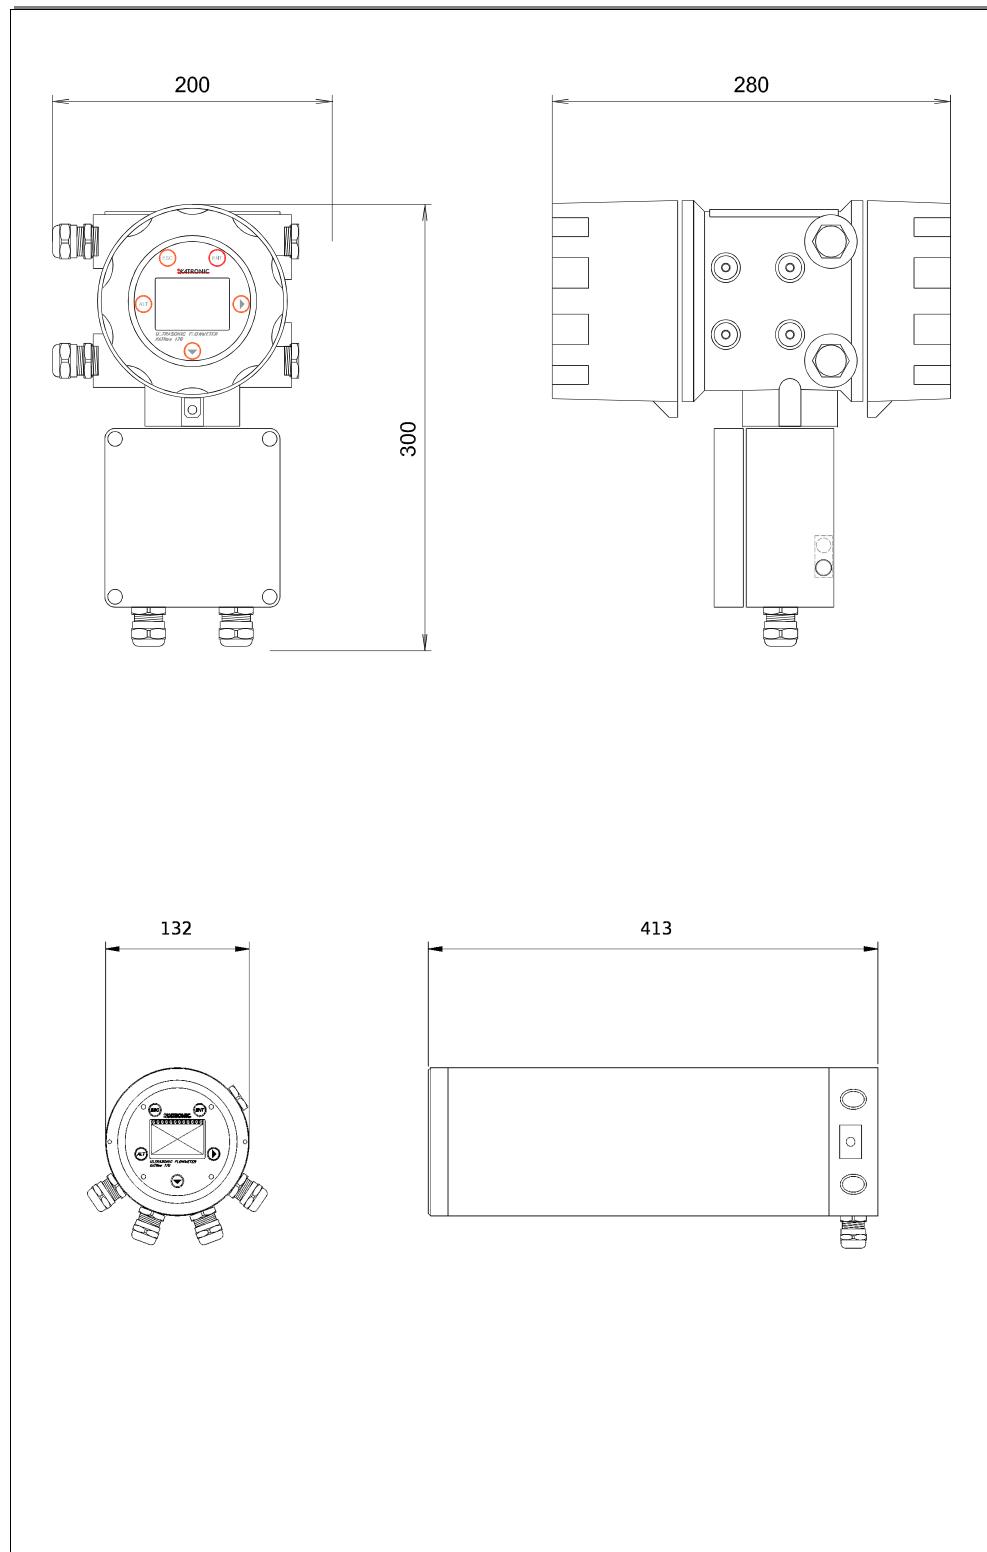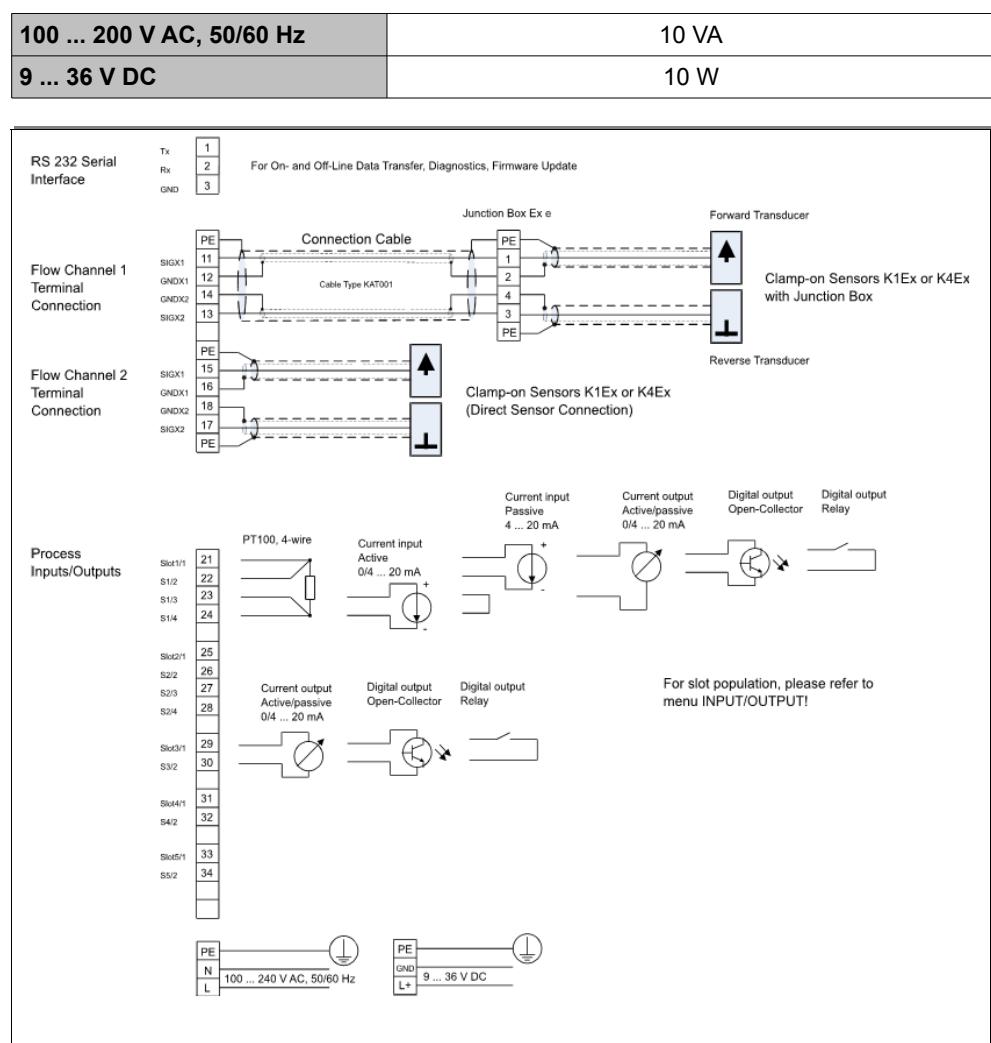

Drawing 1: Electrical connection diagram for the KATflow 170 flowmeter

3.1 Cabling and junction box

The hazardous area K1Ex and K4Ex sensors are manufactured with a standard cable length of 5 m. If this cable length is sufficient for the application, then the sensors can be connected directly to the flowmeter (direct cable connection).



For installations requiring longer cable lengths, the sensors are terminated at an Ex e (increased safety) certified junction box with approved terminals.

The electrical connection between the junction box and the flowmeter (signal cabling) is established using type KAT01 dual coax cable. The cable ends of the coaxial cables must be appropriately terminated with tinned ends or suitably sized ferrules. The signal cable is provided with the system. The maximum recommended signal cable length is 100 m.



DANGER

Where the connecting sensor and/or signal cable may be subject to mechanical damage then the user shall provide additional mechanical protection.

3.1.1 Signal cable parameters

The signal cable supplied with the instrument has the following parameters:

Total attenuation	0.021 dB/m
Capacitance (core/screen)	107 pF/m
Inductance (core/screen)	0.24 µH/m

3.2 Cable glands

The KF170 housing features 2 x M20 cable entries for the sensor cabling and 4 x M20 cable entries for power supply, communication and process input/output connections.



The KF170 housing is supplied with plastic dust caps. The temporary plugs are only intended for sealing the equipment against entry of dust, moisture or other possible ingress during transport, handling and storage. These dust caps must be replaced by suitable Ex e approved cable glands, stopping plugs or conduit adapters with respective sealing before the flowmeter is put into operation.

The installer is responsible for the correct sizing and selection of the Ex e approved cable glands for the explosion-proof box. Unused cable entries must be closed with suitable Ex e blind plugs. Ex e approved cable glands/blind plugs are not part of the standard delivery package and must be provided by the customer or explicitly ordered from KATRONIC.

The following Ex e cable glands are available from KATRONIC:

Cable gland	Cable diameter	Cable type
M20	10 ... 14 mm	Power, communication, process input/output
M20	7 ... 12 mm	Power, communication, process input/output
M20	2 x 6 mm	K1Ex, K4Ex direct sensor connection
M20	12 mm	System cable KAT01 from junction box
M20	Bind plug	

3.3 Equipotential bonding



3.3.1 Clamp-on ultrasonic sensors

The K1Ex and K4Ex sensors feature a terminal connection which must be used to connect the transducers to the equipotential bonding system locally.

3.3.2 Flowmeter

The KATflow 170 flowmeter must always be incorporated in the equipotential bonding system of the hazardous area installation. The explosion-proof housing of the KF170 features a screw terminal outside the housing, which must be earthed locally.

The earthing conductor must be at least 4 mm² (11 AWG) or 2.5 mm² (14 AWG) when mechanically protected as per IEC 364-4-41.

3.4 Process inputs/outputs



If the process inputs/outputs are to be terminated in the hazardous area, the associated equipment must be certified accordingly.

3.5 Clamp-on sensor mounting

Sensor mounting

Before the sensors can be mounted

- the installation location should have been determined,
- a sensor mounting method should be chosen,
- the flowmeter must be mechanically and electrically installed,
- the sensors must be connected to the flowmeter.

Depending on which sensor mounting method is being used, the clamp on sensors are either mounted on the same side of the pipe (Reflection Mode) or on opposite sides of the pipe (Diagonal Mode). The sensor spacing is calculated by the flowmeter from the pipe parameters entered.

3.5.1 Sensor pipe mounting configurations

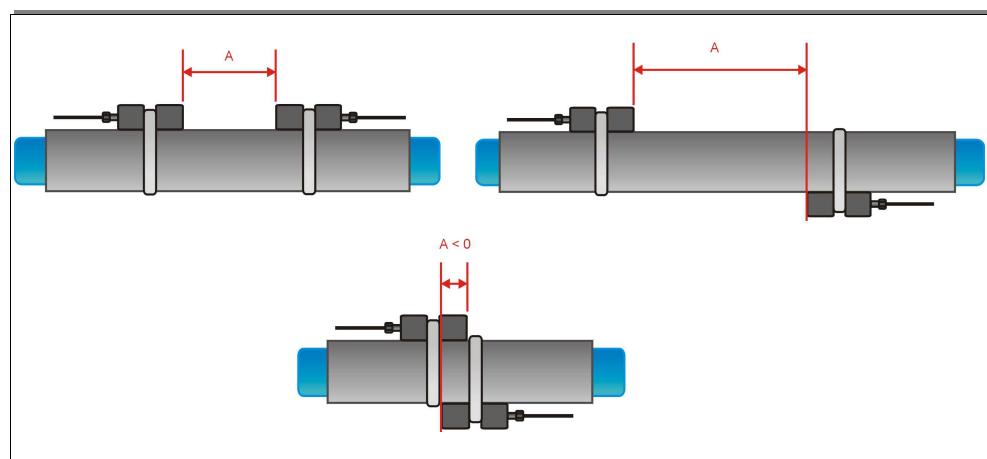


Illustration 9: Sensor pipe mounting configurations

3.5.2 Acoustic coupling gel

In order to obtain acoustical contact between the pipe and the sensors, apply a bead of acoustic coupling gel lengthwise down the centre of the contact area of the sensors.



3.5.3 Correct positioning of the sensors

Correct sensor position

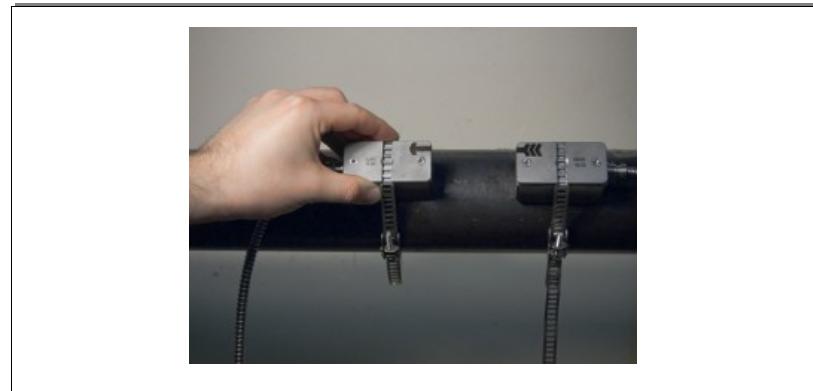


Illustration 11: Correct positioning of the sensors

Always mount the transducer pair so that the free front edges of the sensors face each other.



There is a different engraving on the top of each transducer. The transducers are mounted correctly if the engravings on the two transducers form an arrow. The transducer cables should point in opposite directions.

Later, the arrow, in conjunction with the indicated measured value, will help to determine the direction of flow.

The sensor separation distance is automatically calculated by the flowmeter based on the parameter entries for pipe outside diameter, wall thickness, lining material and thickness, medium, process temperature, the sensor type and the selected number of signal passes.

3.5.4 Sensor mounting with tension straps



Illustration 12: Metallic mounting straps

- Cut the tension straps to the appropriate length.
- Pull at least 2 cm of the tension strap through the slot in the clamp and bend the strap back to secure the clamp to the tension strap.
- Guide the other end of the tension strap through the groove on top of the sensor.
- Place the sensor onto the prepared pipe section.
- Hold the clamp on the transducer with one hand and guide the tension strap around the pipe.
- Pull the tension strap and guide the free end through the clamp so that the clamp hooks engage. Slightly tighten the screw on the clamp.
- Mount the second sensor in the same way.
- Press the sensors firmly to the pipe. There should be no air pockets between the transducer surface and the pipe wall.
- Using a measuring tape, adjust the sensor separation distance as suggested by the flowmeter. When the sensor positioning screen is displayed, the middle bar allows fine adjustment of the sensor location.

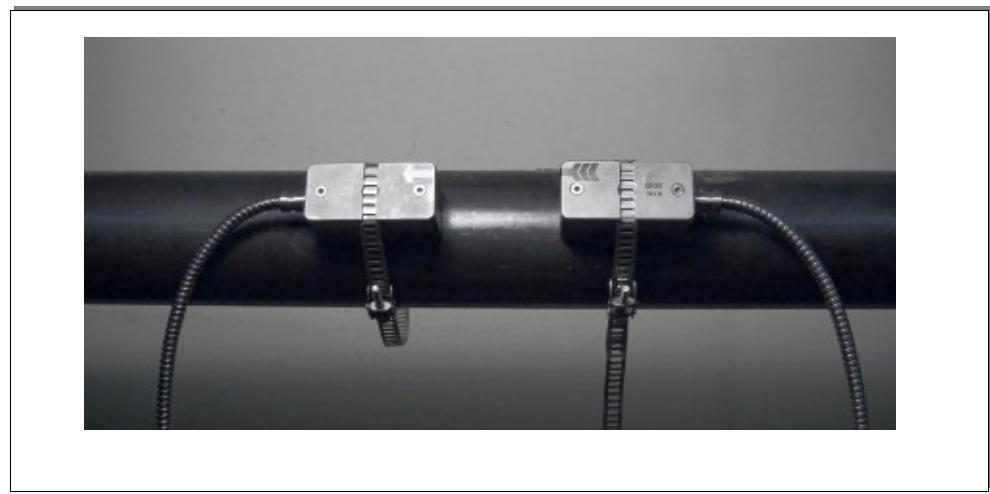


Illustration 13: Sensor mounting with tension straps and clamps

4 Operation

4.1 Switching On/Off

Switching On/Off

The flowmeter is switched on by connecting the power supply to the instrument. Disconnecting the external supply switches off the flowmeter.

4.2 Keypad and display

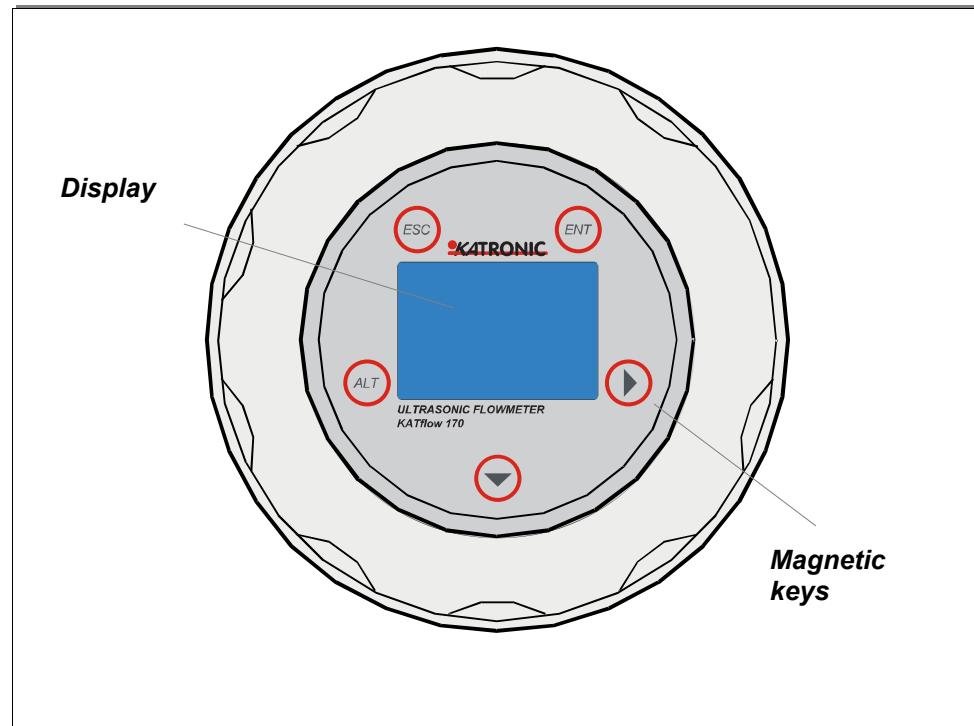


Illustration 14: Keypad and display overview

The keypad of the KF170 consists of 5 magnetic keys which can be operated from the outside of the enclosure using a magnetic pen. Hold the pen against the key area (red circle). The instrument acknowledges the activation of the key by turning the backlight off for a fraction of a second.

4.2.1 Keypad key functions

Key	Main function	Secondary function(s)
RIGHT Arrow	Character position selection for data entry. Move RIGHT .	Screen selection in measurement mode
DOWN Arrow	Move menu/list selection item DOWN	Character entry from scrolled characters, move in scrolled lists screen selection in measurement mode
ALT	Backlight on/off	
ESC	ESCAPE menu item	Abort entry without saving, escape measurement mode
ENT	ENTER menu item	Confirm and save entry or move through menu structure

4.2.2 Display functions

Main measurement display

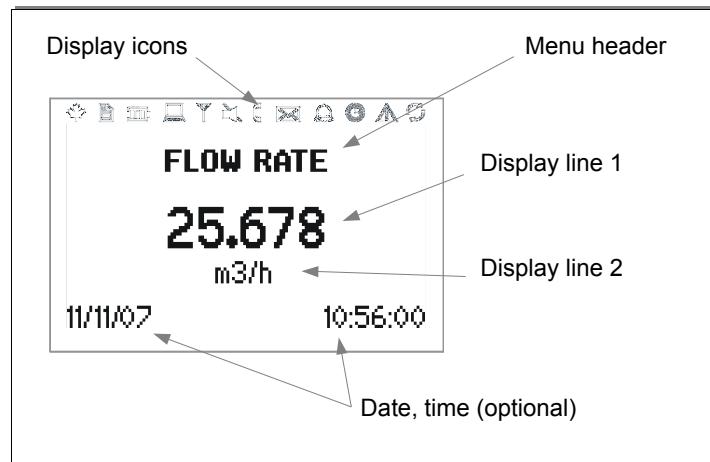


Illustration 15: Main display functions

Display icons

Display icon	Function
	On Not used Off
	On Datalogger recording (where specified) Off Datalogger switched off
	On Not used Off
	On Backlight switched on Off Backlight switched off
	On I/O processor error Off I/O processor functioning correctly
	On Without strike-through: Speaker on Off With strike-through: Speaker off
	On Poor sensor coupling, low SNR Off Sensor coupling OK
	On Not used Off
	On Not used Off
	On Time/date set Off Clock error

Table 3: Display icons

	On	Error recorded in error log
	On	Serial communication on (where specified)
"L", "T" or "LT"	Off	Serial communication off

4.3 Quick setup wizard

Quick start wizard

The quick setup wizard allows for a speedy setup of the most important parameters in order to achieve successful measurements in the shortest possible time:

(Note : Applying the magnetic pen can be considered pressing a key)

Table 4: Quick setup wizard

Display screen	Operation
MAIN MENU Quick start Installation Display In/Output	The main menu is displayed after first power on and the boot-up sequence. Use <DOWN> cursor key to select Quick start . Confirm by pressing <ENT>.
QUICK START Setup Wizard Totaliser Start Measurement	Use <DOWN> cursor key to select Setup Wizard . Confirm by pressing <ENT>. If sensors are recognised, the serial number will be shown. If not recognised or not connected, they may be selected from a list.
MIDDLE UNITS m ³ /h m ³ /m m ³ /s	Select units of measurement using <DOWN> cursor key and pressing <ENT>.
PIPE MATERIAL Stainless Steel Carbon Steel Ductile cast iron	Choose pipe material <DOWN> cursor key and pressing <ENT>.

<p>OUTSIDE DIAMETER</p> <p>76.1</p> <p>mm</p>	<p>Enter outside pipe diameter using <DOWN> and <RIGHT> cursor keys and confirm by pressing <ENT>. Use the <DOWN> key to select the required number or decimal point, use the <RIGHT> key to change to a different decimal position.</p> <p>If 0 is entered, an additional screen appears that allows entering the pipe circumference.</p>																
<p>WALL THICKNESS</p> <p>3.4</p> <p>mm</p>	<p>Enter pipe wall thickness <DOWN> and <RIGHT> cursor keys and confirm by pressing <ENT>.</p>																
<p>FLUID</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Water</p> <p>Saltwater</p> <p>Acetone</p> </div>	<p>Select fluid using the <DOWN> keys. Confirm by pressing <ENT>.</p>																
<p>TEMPERATURE</p> <p>20.0</p> <p>C</p>	<p>Enter process temperature using <DOWN> and <RIGHT> cursor keys and confirm by pressing <ENT>.</p>																
<p>LINER MATERIAL</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>None</p> <p>Epoxy</p> <p>Rubber</p> </div>	<p>Select pipe lining material using the <DOWN> key. Confirm by pressing <ENT>.</p>																
<p>PASSES</p> <div style="border: 1px solid black; padding: 5px; width: fit-content;"> <p>Auto</p> <p>1</p> <p>2</p> </div>	<p>Select transducer configuration (number of passes) using the <DOWN> key.</p> <table> <tr> <td>Auto</td> <td>Automatically</td> </tr> <tr> <td>1</td> <td>1 pass, diagonal mode</td> </tr> <tr> <td>2</td> <td>2 passes, reflection mode</td> </tr> <tr> <td>3</td> <td>3 passes, diagonal mode</td> </tr> <tr> <td>4</td> <td>4 passes, reflection mode</td> </tr> <tr> <td>5</td> <td>5 passes, diagonal mode</td> </tr> <tr> <td>6</td> <td>6 passes, reflection mode</td> </tr> <tr> <td>... etc.</td> <td></td> </tr> </table> <p>Confirm by pressing <ENT>.</p>	Auto	Automatically	1	1 pass, diagonal mode	2	2 passes, reflection mode	3	3 passes, diagonal mode	4	4 passes, reflection mode	5	5 passes, diagonal mode	6	6 passes, reflection mode	... etc.	
Auto	Automatically																
1	1 pass, diagonal mode																
2	2 passes, reflection mode																
3	3 passes, diagonal mode																
4	4 passes, reflection mode																
5	5 passes, diagonal mode																
6	6 passes, reflection mode																
... etc.																	

<p>CHNL1 SENSOR</p> <p>Spacing 110.5 mm</p> <p>Using 2 passes</p> <p>Signal 26 dB</p> 	<p>Sensor positioning screen: Mount transducers with suggested spacing and use middle bar for fine adjustment of position (central position is desired). Observe signal-to-noise (upper bar) and quality (lower bar). These should be of identical length.</p> <p>Confirm by pressing <ENT> to obtain measurements on screen.</p> <p>Note: Numbers shown are for indication only.</p>
--	--

4.4 Measurements

4.4.1 Main process value (PV)

Measurement screens

Measurement is started using the Quick Setup Wizard. Once all the parameters are programmed, any subsequent power-on sequences will immediately give the main PV as a display and/or as an output as appropriate.

Display screen	Operation
FLOW RATE 25.678 <small>m³/h</small> 11/11/07 10:56:00	<p>The main process value can be changed using accessing the menu structure.</p> <p>Press <ESC> at any time to view the main menu.</p> <p>Change to other measurement and diagnostic screens by pressing the <RIGHT> and <DOWN> keys.</p>

4.4.2 3-line display format

Display screen	Operation
CHNL-1 - 0.0 m ³ 25.678 m³/h 1.370 m/s 11/11/07 10:56:00	<p>The three-line display screen is configurable to show flow, totalizers and diagnostic functions.</p> <p>Change to other measurement and diagnostic screens by pressing the <RIGHT> and <DOWN> keys.</p>

4.4.3 Diagnostic displays

Diagnostic screens are activated by pressing <RIGHT> and then <DOWN>.

Diagnostic screens

Display screen	Operation
DIAGNOSTIC 1 55.2 Gain 20.5 Signal -10.0 Noise 11/11/07 10:56:00	Line 1 shows the amplifier gain. Line 2 displays the signal strength. Line 3 indicates the noise. Change to more diagnostic displays by pressing <DOWN>.

4.4.4 Totalisers

The totaliser displays will only be shown when the totalisers are activated.

Totalisers

Display screen	Operation
TOTALISER -1 - 0.0 m3 0.0 + - 0.0 - 11/11/07 10:56:00	The flow totaliser can be started or reset by selecting "Totaliser" from the main menu. The totaliser can be viewed on the three line display as shown or by selecting a quantity as the middle unit. View the three line menu by pressing the <RIGHT> key.

4.4.5 Dual PV display (multi-channel meters)

Display screen	Operation
DUAL-1 37.3 m3/h 1.370 11/11/07 10:56:00	Line 1 shows the PV on the selected channel. Line 2 shows the selected units. Line 3 shows the PV on the other channel (in its selected units) Change to other measurement and diagnostic screens by pressing the <RIGHT> and <DOWN> keys.

4.4.6 "Math" display (when enabled on multi-channel meters)

Display screen	Operation
<p style="text-align: center;">MATH-1</p> <p style="text-align: center;">27.678</p> <p style="text-align: center;">AVE m³/h</p> <p>11/11/07 10:56:00</p>	<p>Displays the "Math" function (when enabled). Sum, difference, average and maximum can be selected in the "Calculation" menu. "Average" shown in illustration.</p> <p>Change to other measurement and diagnostic screens by pressing the <RIGHT> and <DOWN> keys.</p>

4.4.7 Datalogger



The datalogger is enabled from the Main Menu, and operates when a non-zero value is entered for the interval.

Items to be logged are selected from the "Selection" screen. "ENTER" selects items, "0" deselects. Up to ten items may be selected.

(Note : If no items are selected the logger will record blank space)

Send logger by serial port to a terminal program by selecting "Log download". Clear the logger by selecting "Log Erase".

Logged data can be downloaded, viewed and exported using the KatData+ software except when "wrap" mode has been enabled.

5 Commissioning

5.1 Menu structure

Alternative specifications are shown in light grey.

Menu structure

Main menu	Menu level 1	Menu level 2	Description/settings
Quick Start			
	Setup Wizard		
		Sensor type	<i>Indication of sensor type and serial number if automatically detected, otherwise select from list ↑↓</i> K1Ex, K1N, K1L, K1E K4Ex, K4N, K4L, K4E M Q Special
		Middle units	<i>Select from list ↑↓</i> m/s, f/s, in/s, m3/h, m3/min, m3/s, l/h, l/min, l/s, USgall/h, USgall/min, USgall/s, bbl/d, bbl/h, bbl/min, g/s, t/h, kg/h, kg/min, m3, l, Usgall, bbl, g, t, kg W, kW, MW, J, kJ, MJ, Sig dB (signal), noise dB, SNR, C m/s (sound speed), CU (housing temperature) SOS, DEN, KIN, SHC (medium parameters) TEMP, Tin, Tout (compensation, inlet and outlet temperature) Math
		Pipe material	<i>Select from list ↑↓</i> Stainless steel, Carbon steel Ductile cast iron, Grey cast iron Copper, Lead PVC, PP, PE, ABS Glass, Cement, User
		Pipe c-speed	<i>Only if user pipe material selected</i> 600 ... 6553.5 m/s
		Outside diameter	6 ... 6500 mm
		Wall thickness	0.5 ... 75 mm
		Fluid	<i>Select from list ↑↓</i> Water, Salt water Acetone, Alcohol, Ammonia Carbon Tet (carbon tetrachloride) Ethanol, Ethyl alcohol, Ethyl ether Ethylene glycol, Glycol/water 50% Kerosene, Methanol, Methyl alcohol Milk, Naphtha, Car oil Freon R134a, Freon R22 Hydrochloric acid, Sour cream, Sulphuric acid Toluene, Vinyl chloride User (enter kinematic viscosity, density, medium c-speed)
		Kinematic viscosity	<i>Only if user fluid selected</i> 0.001 ... 30000 mm ² /s
		Density	<i>Only if user fluid selected</i> 100 ... 2000 kg/m ³
		Medium c-speed	<i>Only if user fluid selected</i> 800 ... 3500 m/s

		Temperature	-30 ... 300 °C
		Liner Material	Select from list ↑↓ None, Epoxy, Rubber, PVDF, PP, Glass, Cement, User (liner c-speed)
		Liner c-speed	Only if lining material selected 600 ... 6553.0 m/s
		Liner thickness	Only if lining material selected 1.0 ... 99.0 mm
		Passes	Select from list ↑↓ Auto 1 ... 16
	Totaliser		Off, On Reset+ (positive total), Reset - (negative total) Reset both
Installation			
	Pipe		
		Material	Select from pipe material list ↑↓
		Outside diameter	6 ... 6500 mm
		Wall thickness	0.5 ... 75 mm
		C-speed	600 ... 6553.5 m/s
		Circumference	18.8 ... 20420.4 mm
		Roughness	0.0 ... 10 mm
	Medium		
		Fluid	Select from fluid list ↑↓
		Kinematic (viscosity)	0.001 ... 30000 mm ² /s
		Density	100 ... 2000 kg/m ³
		C-speed	800 ... 3500 m/s
		Temperature	-30 ... 300 °C
	Lining		
		Material	Select from material list ↑↓
		Thickness	1 ... 99 mm
		C-speed	600 ... 6553.0 m/s
	Passes		
		Passes	Select from list ↑↓
	Display	Units - Top, middle, bottom line	Select from unit list ↑↓
		Damping	Reduces fluctuations in the display output 1 ... 255 s
	In/Output	Type	Lists available input/output slots Possible configurable settings below [where specified]
	Current out	Source	Off Channel 1, Channel 2 System, Test
		Units	Select from list ↑↓
		Min Value	Min. process variable (PV) value that corresponds to 0/4 mA
		Max Value	Max. process variable (PV) value that corresponds to 20 mA
		Damping	Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s

		Span	0 ... 20 mA or 4 ... 20 mA
		Error	<i>Defines output behaviour in the event of error Select from list ↑↓ Hold (last value for specified time), 3.8 mA, 21.0 mA</i>
	Voltage out	Source	<i>Off Channel 1 System</i>
		Units	<i>Select from list ↑↓</i>
		Min Value	<i>Min. process variable (PV) value that corresponds to 0 V</i>
		Max Value	<i>Max. process variable (PV) value that corresponds to 10 V</i>
		Damping	<i>Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s</i>
		Error	<i>Defines output behaviour in the event of error Select from list ↑↓</i>
	Frequency out	Source	<i>Off Channel 1 System</i>
		Units	<i>Select from list ↑↓</i>
		Min Value	<i>Min. process variable (PV) value that corresponds to minimum frequency</i>
		Max Value	<i>Max. process variable (PV) value that corresponds to maximum frequency</i>
		Damping	<i>Additional smoothing of the current output, the higher the damping factor, 1 ... 255 s</i>
		Error	<i>Defines output behaviour in the event of error Select from list ↑↓</i>
	Pulse Out		
		Source	<i>Select from list ↑↓</i>
		Units	<i>Select from unit list ↑↓</i>
		Mode	<i>Select from list ↑↓ Alarm (select on point, off point) Pulse (select value, width) Linear (select min value, max value, damping)</i>
	Relay Out		
		Source	<i>Select from list ↑↓</i>
		Units	<i>Select from unit list ↑↓</i>
		Mode	<i>Select from list ↑↓ Alarm (select on point, off point) Pulse (select value, width) Linear (select min value, max value, damping)</i>
	Current In		
		Source (channel)	<i>Select from list ↑↓ Off, Channel 1, Channel 2, Math 1, Math 2 System, Test</i>
		Source (value)	<i>Select from list ↑↓ Density, Viscosity, Temperature, Other</i>
			<i>Minimum, Maximum, Span settings as on outputs</i>
	PT100		<i>Temperature inputs</i>
		Source	<i>Fixed – A fixed temperature can be entered under value PT100 – Value read from PT100 temperature sensor in °C</i>
		Value	<i>Enter fixed user defined value</i>

			0 ... 250 °C
		Offset	<i>Enter fixed user defined value -100 ... 100 °C</i>
	RS 485		[where specified]
	Modbus RTU		[where specified]
	HART		[where specified]
System			
	Instrument information		
		Model Code	170
		Serial No.	<i>Example: 17000026</i>
		HW Revision	Hardware version (system, ultrasonic board)
		SW Revision	Software version (system, ultrasonic board)
	Calculation		
		Low F Cut	<i>± Low flow velocity cut off 0 ... 0.025 m/s</i>
		Max F Cut	<i>± Maximum flow velocity cut off 0 ... 30 m/s</i>
		Corrected	<i>Apply flow velocity profile correction Yes, No</i>
		PV Offset	<i>Calibration process variable zero offset -30 ... 30 units</i>
		PV Scaling	<i>Calibration process variable gradient scaling 0 ... 10000 units</i>
		Zero Cal	<i>Zero calibration settings</i>
		Zero	<i>Perform auto zero calibration Yes, No</i>
		Track	<i>Track zero offset Yes, No</i>
		Delta	<i>Zero flow delta time offset in ns, read from sensor PROM or entered directly for special sensors</i>
		Timeup	<i>Upstream transit-time offset in µs, allows for fixed delays in special sensors, buffer rods and extension leads</i>
		Math Functions	<i>None, sum, difference, average, maximum</i>
		Heat Capacity	Specific heat capacity of medium
User			
		Identifier	<i>Example: Pump P3A 9 character string</i>
		Tag No.	<i>Example: 1FT-3011 9 character string</i>
		Password	Four digit operator code
Test			
		Installation	<i>Control system simulation: 60 second increase of flow velocity in m/s from 0 to programmed Max F Cut, then 60 second decrease, i.e. the process variable changes over complete possible range. All configured outputs exhibit their programmed behaviour. Yes/No</i>
			Test modes also available for display, keypad, memory, peripheral and ultrasonic components
	Settings		
		Date, Time, Date Format	<i>Enter or select from list</i>

	Language	Select from list ↑↓(as available) English, German, French
	Keypad	Enable keypad sound Yes/No
	Defaults	Reload factory default settings, except date/time Yes/No
	Key lock	Yes, No (locks keys until password is entered)
Diagnostics		[where specified]
Datalogger		[where specified]
	Interval	Enter logging interval in seconds ('0' for off, 0..999s)
	Selection	Select up to 10 items from list ↑↓ m/s, f/s, in/s, m3/h, m3/min, m3/s, l/h, l/min, l/s, USgall/h, USgall/min, USgall/s, bbl/d, bbl/h, bbl/min, g/s, t/h, kg/h, kg/min, m3, l, Usqall, bbl, g, t, kg W, kW, MW, J, kJ, MJ, Sig dB (signal), noise dB, SNR, C m/s (sound speed), CU (housing temperature) SOS, DEN, KIN, SHC (medium parameters) TEMP, Tin, Tout (compensation, inlet and outlet temperature) Math
	Low memory	Logger space remaining at low memory alarm
	Log Wrap	Saves "selected" items as a continuous stream without headers (Note : this means files cannot be processed by KATData+) Yes/No
	Log Download	Send logger data using communication port
	Log Erase	Erase data on logger (clear logger)
Serial Comms		[where specified]
	Mode	Select from list ↑↓ None, Printer (continuous 1 s serial ASCII output), Diagnostic, Download (logger), Calibration test (factory)
	Baud	Select from list ↑↓ 9600, 19200, 57600, 115200
	Parity	Select from list ↑↓ None, Even, Odd
	Type	RS232, RS485, etc. (as installed)

Table 5: Firmware menu structure

5.2 Diagnostics [where specified]

Diagnostic screens, where specified, can be viewed directly during measurement through the menu structure.

5.3 Display settings

The main Process Value (PV) is the primary measurement data. Customer specific settings for data to be displayed can be set in the appropriate menu items. The PV can be selected from a list of available items.



5.4 Output configuration

Serial interfaces

5.4.1 Serial interface RS 232

The RS 232 serial interface can be used to transmit data on-line over distances up to 15 m or for device configuration and maintenance tasks.

5.4.2 Serial interface RS 485

The RS 485 serial interface can be used to transmit data on-line for distances up to 1200 m. This is achieved by directing the ASCII printer output via the RS 485 interface.

5.4.3 Modbus RTU



The RS 485 interface is used for networking up to 32 flowmeters to a centralised computer system. Each flowmeter is given an unique address to be able to communicate effectively. The communication protocol used conforms to the conventions of the Modbus RTU protocol, a description of which is given in a separate document. Please refer to customer support for further information.

Wiring	<p>Modbus RTU slave (optional)</p>
Setup	Please refer to customer support.
Operation	Please refer to customer support.



5.4.4 HART compatible output

The KF170 can also be configured with an optional module which responds to output commands conforming to the HART protocol. Please refer to customer support for further information.

HART® is a registered trademark of the HART Communication Foundation.

Wiring	<p>HART (optional)</p>
Setup	Please refer to customer support.
Operation	Please refer to customer support.

Analogue outputs**5.4.5 Analogue current output 0/4 ... 20 mA**

The analogue current outputs operate in a 4 ... 20 mA or 0 ... 20 mA span.



Current outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

Wiring	<p>Active I out (optional)</p> <p>Passive I out (optional)</p>
Electrical characteristics	<p>0/4 ... 20 mA active and 4 ... 20 mA passive options Galvanically isolated from main electronics and from other I/O's Passive: $U = 9 \dots 30 \text{ V}$, $R_{\text{load}} = 50 \text{ Ohm}$ typical, resolution 16 bit, accuracy 0.1 % of MV Active: $R_{\text{load}} < 500 \text{ Ohm}$, $U = 30 \text{ V}$, resolution 16 bit, accuracy 0.1 % of MV</p>

5.4.6 Analogue voltage output 0 ... 10 V

Voltage outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

Wiring	<p>Volts out (optional)</p>
Electrical characteristics	<p>Galvanically isolated from main electronics and from other I/O's Range 0 ... 10 V, $R_{\text{load}} = 1000 \text{ Ohm}$, resolution 16 bit, accuracy 0.1 % of MV</p>

5.4.7 Analogue frequency output

Frequency outputs may be assigned to process values in the “mode” section of the output menu. The outputs can be programmed and scaled within the menu structure.

Wiring	<p>Frequency (analogue output) (optional)</p>
Electrical characteristics	<p>Galvanically isolated from main electronics and from other I/O's Open-Collector circuit, range 2 ... 10000 Hz, $U = 24 \text{ V}$, $I_{\text{max}} = 4 \text{ mA}$</p>

s	
---	--


Digital outputs

5.4.8 Digital open collector output

Open-Collector outputs may be assigned to process values in the “mode” section of the output menu. The outputs are configured using the menu structure.

The totaliser function is enabled and controlled using the menu structure.

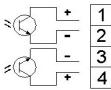


Wiring 	Optically switched relay “Open-Collector” (optional)  <table style="margin-left: 20px;"> <tr> <td>1</td> <td>+</td> <td>— NO —</td> </tr> <tr> <td>2</td> <td>-</td> <td>— NO —</td> </tr> <tr> <td>3</td> <td>-</td> <td>— NC —</td> </tr> <tr> <td>4</td> <td>+</td> <td>— NC —</td> </tr> </table>	1	+	— NO —	2	-	— NO —	3	-	— NC —	4	+	— NC —
1	+	— NO —											
2	-	— NO —											
3	-	— NC —											
4	+	— NC —											
Electrical characteristics	Galvanically isolated from main electronics and from other I/O's Totaliser pulse value 0.01...1000 1/unit, active high and active low switch type available, width 1 ... 990 ms, U = 24 V, I _{max} = 4 mA												

5.4.9 Digital relay output

Relay outputs may be assigned to process values in the “mode” section of the output menu. The relay outputs are configured using the menu structure.

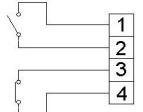


Wiring 	 <table style="margin-left: 20px;"> <tr> <td>1</td> <td>— NO —</td> </tr> <tr> <td>2</td> <td>— NO —</td> </tr> <tr> <td>3</td> <td>— NC —</td> </tr> <tr> <td>4</td> <td>— NC —</td> </tr> </table>	1	— NO —	2	— NO —	3	— NC —	4	— NC —
1	— NO —								
2	— NO —								
3	— NC —								
4	— NC —								
Electrical characteristics	Form A (SPDT-NO and NC) contacts Width 3 ... 990 ms U = 48 V, I _{max} = 250 mA Galvanically isolated from main electronics and from other I/O's Operating modes: Alarm, fault, totaliser (programmable) 1 off form A (SPST-NO) contacts 1 of form A (SPST-NC) contacts								

5.5 Input configuration

5.5.1 PT100 inputs



Inputs

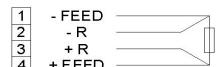

Wiring 	Temperature input PT100, 4 wire (optional) 
	Temperature input PT100, 3 wire (optional) 
Electrical characteristics	3 and 4 wire options Galvanically isolated from main electronics and from other I/O's Temperature range -50 ... 400 °C Resolution 0.01 K

	Accuracy ±0.1 K
--	-----------------

5.5.2 Analogue current input 0/4 ... 20 mA

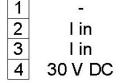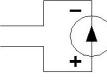	Wiring Analogue input (optional)   Electrical characteristics Active or passive wiring Measuring range active 0 ... 20 mA at 30 V Measuring range passive 4 ... 20 mA Accuracy 0.1 % of measured value
---	--

5.6 Temperature compensation (TC) – [where installed]



With temperature compensation enabled the temperature dependency of the medium in relation to speed-of-sound, viscosity and density calculations will be compensated for. This is in particular useful for hydrocarbon measurement applications.

The In/Output menu will then allow the user to select the temperature input source; either PT100 temperature sensors or via a 0/4 ... 20 mA input channel.



5.7 Sound velocity measurement (SVM)

The measured sound velocity (SOS) is available as a Process Value and as diagnostic function (where specified) during measurement and may be applied to a Process Output by selecting "C m/s" from the appropriate menu.

This option is used for speed-of-sound, interface detection, product recognition, pig detection and concentration measurement applications.

5.8 Dual-channel flow calculations (maths functions)


Where suitably equipped, dual channel calculations are available from the System/Calculation/Math menu.

These allow the user to select the sum, difference, average (mean) or maximum of the two flow channels.

This value may be displayed or applied to a Process Output by selecting MATH from the appropriate output menu.

5.9 Scope function

Katronic flowmeters have an additional scope function which shows a representation of the pulse received by the sensors on Channel 1.

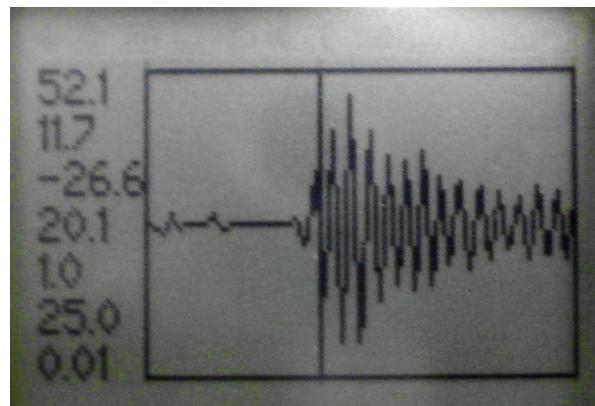

In addition to displaying the received pulse, this screen lists the following data (from top to bottom) :

Gain (dB)
Signal (dB)
Noise (dB)
Transit time (us)
Delta (ns) - [time downstream minus time upstream]
Control unit temperature (degC)
Flow (m/s)

6 Maintenance

The KATflow 170 flowmeters are maintenance free concerning the flow measurement functions. Within the scope of periodic inspections required for electrical equipment installed in hazardous areas, regular inspection for signs of damage or corrosion is recommended for the transducers, the junction box if installed, and the explosion-proof flowmeter housing.

6.1 Opening/closing the KF170 Ex d compartment



DANGER

The following instructions must always be carefully followed if opening the Ex d compartment of the KF170 transmitter. Ensure similar care is taken to close it when work is complete.

Before opening:

- Make certain that there is no explosion hazard.
- Site policies must be followed and all required documentation obtained before commencing work.
- Make sure that all connecting cables are safely isolated from all external sources.
- Allow the electronics to de-energize before opening the electronics compartment of the explosion-proof housing. Wait at least 10 minutes before opening.
- When the instructions above have been strictly followed, the cover of the explosion-proof compartment may be opened. Unlock the locking screw and carefully turn the cover.

Closing:

- Screw the cover of the Ex d compartment and tighten it firmly and lock it with the locking screw using a suitable Allen key.

6.2 Service/Repair

The KATflow 170 flowmeter has been carefully manufactured and tested. If installed and operated in accordance with the operating instructions, no problems are usually experienced.

Should you nevertheless need to return a device for inspection or repair, please pay attention to the following points:



- Due to statutory regulations on environmental protection and safeguarding the health and safety of our personnel, the manufacturer may only handle, test and repair returned devices that have been in contact with products without risk to personnel and environment.
- This means that the manufacturer can only service this device if it is accompanied by a Customer Return Note (CRN) confirming that the device is safe to handle.

If the device has been operated with toxic, caustic, flammable or water-endangering products, you are kindly requested:



- to check and ensure, if necessary by rinsing or neutralising, that all cavities are free from such dangerous substances,
- to enclose a certificate with the device confirming that is safe to handle and stating the product used.

7 Troubleshooting

Should there be the need to call customer service, please let us know the following details:



- Model code
- Serial number
- SW, HW revision
- Error log list

Possible error messages may include the following:

Error list

Error message	Group	Description	Error handling
USB INIT FAIL	Hardware	Internal board communication error	Power on/off, otherwise call customer support
NO SERIAL NO.	Hardware	Failed to read from FRAM	Call customer support
NO VERSION NO.	Hardware	Failed to read from FRAM	Call customer support
PARA READ FAIL	Hardware	Failed to read from FRAM	Load defaults, otherwise call customer support
PARA WRITE FAIL	Hardware	Failed to write to FRAM	Load defaults, otherwise call customer support
VAR READ FAIL	Hardware	Failed to read from FRAM	Call customer support
VAR WRITE FAIL	Hardware	Failed to write to FRAM	Call customer support
SYSTEM ERROR	Hardware		Call customer support
VISIBILITY ERR	Hardware	Failed to read from FRAM	Call customer support
FRAM LONG WRITE ERR	Hardware	Failed to write to FRAM	Call customer support
FRAM READ ERR	Hardware	Failed to read from FRAM	Call customer support
RTC ERR	Hardware	Real Time Clock failure	Power on/off, otherwise call customer support
EXTMEM ERR	Hardware	Logger memory failure	Power on/off, otherwise call customer support
SPI ERR	Hardware	SPI bus failure	Power on/off, otherwise call customer support
I2C ERR	Hardware	I2C bus failure	Power on/off, otherwise call customer support
MATH ERR	Software	Internal calculation error	Call customer support
STACK ERR	Software	Internal calculation error	Call customer support
ADDR ERR	Software	Internal calculation error	Call customer support
OSC ERR	Software	Internal calculation error	Call customer support
ADC ERR	Software	Internal calculation error	Call customer support
IO ERR	Software	Internal calculation error	Call customer support
TIMING ERR	Software	Internal calculation error	Call customer support
COMM INIT ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM START ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM HS0 ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support

COMM HS1 ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ AVE ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ RAW ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM READ HISTORY ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
COMM CRC ERR	Hardware	Internal communication error	Power on/off, otherwise call customer support
SENSOR COUPLING ERR	Application	Weak sensor coupling, low SNR	Recouple sensors, check installation, reduce number of passes, look for other location, call customer support

Table 6: Error messages

7.1 Data download difficulties

If difficulties are encountered downloading the logger data : -

- Check that the flowmeter is switched on and not in measurement mode.
- Check that the same number COM port is allocated in the "Device Manager" (or equivalent) as is set in the KatData+ software.
- Check that the settings (baud, parity, word length, stop bits) are identical.
- Use the supplied connectors – whether connecting to a 9-pin COM port or converting from serial communication to a Universal Serial Bus (USB).
- Is the logger in "Wrap" mode? If "yes", use a terminal program and the "Log download" command. If "No", KatData+ software may also be used.

8 Technical data

Material	Sound Speed* Shear Wave (at 25 °C)	
	m/s	ft/s
Steel, 1% Carbon, hardened	3,150	10,335
Carbon Steel	3,230	10,598
Mild Steel	3,235	10,614
Steel, 1% Carbon	3,220	10,565
302 Stainless Steel	3,120	10,236
303 Stainless Steel	3,120	10,236
304 Stainless Steel	3,141	10,306
304L Stainless Steel	3,070	10,073
316 Stainless Steel	3,272	10,735
347 Stainless Steel	3,095	10,512
Aluminium	3,100	10,171
Aluminium (rolled)	3,040	9,974
Copper	2,260	7,415
Copper (annealed)	2,325	7,628
Copper (rolled)	2,270	7,448
CuNi (70%Cu 30%Ni)	2,540	8,334
CuNi (90%Cu 10%Ni)	2,060	6,759
Brass (Naval)	2,120	6,923
Gold (hard-drawn)	1,200	3,937
Inconel	3,020	9,909
Iron (electrolytic)	3,240	10,630
Iron (Armco)	3,240	10,630
Ductile Iron	3,000	9,843
Cast Iron	2,500	8,203
Monel	2,720	8,924
Nickel	2,960	9,712
Tin (rolled)	1,670	5,479
Titanium	3,125	10,253
Tungsten (annealed)	2,890	9,482
Tungsten (drawn)	2,640	8,661
Tungsten (carbide)	3,980	13,058
Zinc (rolled)	2,440	8,005
Glass (pyrex)	3,280	10,761
Glass (heavy silicante first)	2,380	7,808
Glass (light brate crown)	2,840	9,318
Nylon	1,150	3,772
Nylon, 6-6	1,070	3,510
Polyethylene (LD)	540	1,772
PVC, CPVC	1,060	3,477
Acrylic	1,430	4,690
PTFE	2,200	7,218

* Please note these values are to be considered nominal. Solids may be inhomogeneous and anisotropic. Actual values depend on exact composition, temperature, and to a lesser extent, on pressure and stress.

All data given at 25 °C (77 °F) unless otherwise stated

Substance	Chemical Formula	Specific Gravity	Sound Speed		Change Viscosity v/°C (Kinematic)		
			m/s	ft/s	m/s/°C	mm²/s	X10-6 ft²/s
Acetic anhydride	(CH ₃ CO) ₂ O	1.082 (20 °C)	1,180	3,871.4	2.5	0.769	8.274
Acetic acid, anhydride	(CH ₃ CO) ₂ O	1.082 (20 °C)	1,180	3,871.4	2.5	0.769	8.274
Acetic acid, nitrile	C ₂ H ₃ N	0.783	1,290	4,232.3	4.1	0.441	4.745
Acetic acid, ethyl ester	C ₄ H ₈ O ₂	0.901	1,085	3,559.7	4.4	0.467	5.025
Acetic acid, methyl ester	C ₃ H ₆ O ₂	0.934	1,211	3,973.1		0.407	4.379
Acetone	C ₃ H ₆ O	0.791	1,174	3,851.7	4.5	0.399	4.293
Acetylene dichloride	C ₂ H ₂ Cl ₂	1.26	1,015	3,330.1	3.8	0.400	4.304
Alcohol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.396	15.02
Ammonia	NH ₃	0.771	1,729 (33 °C)	(- 5,672.6 (-27 °C))	6.68	0.292 (-33 °C)	3.141 (-27 °F)
Benzene	C ₆ H ₆	0.879	1,306	4,284.8	4.65	0.711	7.65
Benzol	C ₆ H ₆	0.879	1,306	4284.8	4.65	0.711	7.65
Bromine	Br ₂	2.928	889	2,916.7	3.0	0.323	3.475
n-Butane(2)	C ₄ H ₁₀	0.601 (0°C)	1,085 (5° C)	(- 3,559.7 (23 °C))	5.8		
2-Butanol	C ₄ H ₁₀ O	0.81	1,240	4,068.2	3.3	3.239	34.851
sec-Butylalcohol	C ₄ H ₁₀ O	0.81	1,240	4,068.2	3.3	3.239	34.851
n-Butyl bromide (46)	C ₄ H ₉ Br	1.276 (20 °C)	1,019 (20 °C)	3,343.2 (68 °F)		0.49 (15 °C)	5.272 (59 °C)
n-Butyl chloride (22,46)	C ₄ H ₉ Cl	0.887	1,140	3,740.2	4.57	0.529 (15 °C)	5.692 (59 °F)
Carbon tetrachloride	CCl ₄	1.595 (20°C)	926	3038.1	2.48	0.607	6.531
Carbon tetrafluoride (Freon 14)	CF ₄	1.75 (-150 °C)	875.2 (150 °C)	(- 2,871.5 (-238 °F))	6.61		
Chloroform	CHCl ₃	1.489	979	3,211.9	3.4	0.55	5.918
Dichlorodifluoromethane (Freon 12)	CCl ₂ F ₂	1.516 (40 °C)	774.1	2,539.7	4.24		
Ethanol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.39	14.956
Ethyl acetate	C ₄ H ₈ O ₂	0.901	1,085	3,559.7	4.4	0.489	5.263
Ethyl alcohol	C ₂ H ₆ O	0.789	1,207	3,960	4.0	1.396	15.020
Ethyl benzene	C ₈ H ₁₀	0.867 (20 °C)	1,338 (20 °C)	4,89.8 (68 °F)		0.797 (17 °C)	8.575 (63 °F)
Ether	C ₄ H ₁₀ O	0.713	985	3231.6	4.87	0.311	3.346
Ethyl ether	C ₄ H ₁₀ O	0.713	985	3231.6	4.87	0.311	3.346
Ethylene bromide	C ₂ H ₄ Br ₂	2.18	995	3264.4		0.79	8.5
Ethylene chloride	C ₂ H ₄ Cl ₂	1.253	1,193	3,914		0.61	6.563
Ethylene glycol	C ₂ H ₆ O ₂	1.113	1,658	5439.6	2.1	17,208 (20 °C)	185.158 (68 °F)
Fluorine	F	0.545 (-143 °C)	403 (- 143 °C)	1322.2 (- 225 °F)		11.31	
Formaldehyde, methyl ester	C ₂ H ₄ O ₂	0.974	1,127	3697.5	4.02		
Freon R12				774.2	2540		
Glycol	C ₂ H ₆ O ₂	1.113	1658	5439.6	2.1		
50% Glycol/50% H ₂ O				1,578	5,177		
Isopropanol	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Isopropyl alcohol (46)	C ₃ H ₈ O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Kerosene		0.81	1,324	4,343.8	3.6		

Methane	CH4	0.162 (-89 °C)	405 (-89 °C)	1,328.7 (-128 °F)	17.5		
Methanol	CH4O	0.791 (20 °C)	1,076	3,530.2	292	0.695	7.478
Methyl acetate	C3H6O2	0.934	1,211	3,973.1		0.407	4.379
Methyl alcohol	CH4O	0.791	1,076	3,530.2	292	0.695	7.478
Methyl benzene	C7H8	0.867	1,328 (20 °C)	4,357 (68 °F)	4.27	0.644	7.144
Milk, homogenized			1,548	5,080			
Naphtha		0.76	1,225	4,019			
Natural Gas		0.316 (-103 °C)	753 (- 103 °C)	2,470.5 (-153 °F)			
Nitrogen	N2	0.808 (-199 °C)	962 (- 199 °C)	3,156.2 (-326 °F)		0.217 (- 199 °C)	2.334 (- 326 °F)
Oil, Car (SAE 20a.30)		1.74	870	2,854.3		190	2,045.093
Oil, Castor	C11H10O0	0.969	1,477	4,845.8	3.6	0.670	7.209
Oil, Diesel		0.80	1,250	4,101			
Oil, Fuel AA gravity		0.99	1,485	4,872	3.7		
Oil (Lubricating X200)			1,530	5,019.9			
Oil (Olive)		0.912	1,431	4,694.9	2.75	100	1,076.365
Oil (Peanut)		0.936	1,458	4,738.5			
Propane (-45 to -130 °C)	C3H8	0.585 (-45 °C)	1,003 (-45 °C)	-3,290.6 (-49 °F)	5.7		
1-Propanol	C3H8O	0.78 (20 °C)	1,222 (20 °C)	4,009.2 (68 °F)			
2-Propanol	C3H8O	0.785 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)		2.718	29.245
Propene	C3H6	0.563 (-13°C)	963 (-13 °C)	-3159.4 (9°F)	6.32		
n-Propyl-alcohol	C3H8O	0.78 (20 °C)	1,222 (20 °C)	4,009.2 (68 °F)		2.549	27.427
Propylene	C3H6	0.563 (-13 °C)	963 (-13 °C)	3159.4 (9 °F)	6.32		
Refrigerant 11	CCl3F	1.49	828.3 (0 °C)	2,717.5 (32 °F)	3.56		
Refrigerant 12	CCl2F2	1.516 (-40 °C)	774.1 (-40 °C)	-2,539.7 (-40 °C)	4.24		
Refrigerant 14	CF4	1.75 (-150 °C)	875.24 (-150 °C)	-2,871.6 (-268 °F)	6.61		
Refrigerant 21	CHCl2F	1.426 (0 °C)	891 (0 °C)	2,923.2 (32 °F)	3.97		
Refrigerant 22	CHClF2	1.491 (-69 °C)	893.9 (-69 °C)	2,932.7 (122 °F)	4.79		
Refrigerant 113	CCl2F-CClF2	1.563	783.7 (0 °C)	2,571.2 (32 °F)	3.44		
Refrigerant 114	CClF2-CClF2	1.455	665.3 (-10 °C)	-2,182.7 (14 °F)	3.73		
Refrigerant 115	C2ClF5		656.4 (-50 °C)	-2,153.5 (-58 °F)	4.42		
Refrigerant C318	C4F8	1.62 (-20 °C)	574 (-10 °C)	1,883.2 (14 °F)	3.88		
Sodium nitrate	NaNO3	1.884 (336 °C)	1,763.3 (336 °C)	5,785.1 (637 °F)	0.74	1.37 (336 °C)	14.74 (637 °F)
Sodium nitrite	NaNO2	1.805 (292 °C)	1876.8 (292 °C)	6157.5 (558 °F)			
Sulphur	S		1177 (250 °C)	3861.5 (482 °F)	-1.13		
Sulphuric Acid	H2SO4	1.841	1,257.6	4,126	1.43	11.16	120.081

Tetrachloroethane	C2H2Cl4	1553 (20 °C)	1,170 (20 °C)	3,838.6 (68 °F)	1.19	12.804	
Tetrachloro-ethene	C2Cl4	1.632	1,036	3,399			
Tetrachloro-Methane	CCl4	1.595 (20 °C)	926	3,038.1	0.607	6.531	
Tetrafluoro-methane (Freon 14)	CF4	1.75 (-150 °C)	875.24 (-150 °C) -2,871.5 (-283 °F)	6.61			
Toluene	C7H8	0.867 (20 °C)	1,328 (20 °C)	4,357 (68 °F)	4.27	0.644	6.929
Toluol	C7H8	0.866	1,308	4,291.3	4.2	0.58	6.24
Trichloro-fluoromethane (Freon 11)	CCl3F	1.49	828.3 (0 °C)	2,717.5 (32 °F)	3.56		
Turpentine		0.88	1,255	4,117.5		1.4	15.064
Water, distilled	H2O	0.996	1,498	4,914.7	-2.4	1.00	10.76
Water, heavy	D2O		1,400	4,593			
Water, sea		1.025	1531	5023	-2.4	1.00	10.76

Temperature °C	Temperature °F	Sound Speed in Water	
		m/s	ft/s
0	32.0	1402	4600
1	33.8	1407	4616
2	35.6	1412	4633
3	37.4	1417	4649
4	39.2	1421	4662
5	41.0	1426	4679
6	42.8	1430	4692
7	44.6	1434	4705
8	46.4	1439	4721
9	48.2	1443	4734
10	50.0	1447	4748
11	51.8	1451	4761
12	53.6	1455	4774
13	55.4	1458	4784
14	57.2	1462	4797
15	59.0	1465	4807
16	60.8	1469	4820
17	62.6	1472	4830
18	64.4	1476	4843
19	66.2	1479	4853
20	68.0	1482	4862
21	69.8	1485	4872
22	71.6	1488	4882
23	73.4	1491	4892
24	75.2	1493	4899
25	77.0	1496	4908
26	78.8	1499	4918
27	80.6	1501	4925
28	82.4	1504	4935
29	84.2	1506	4941
30	86.0	1509	4951
31	87.8	1511	4958
32	89.6	1513	4964
33	91.4	1515	4971

34	93.2	1517	4977
35	95.0	1519	4984
36	96.8	1521	4984
37	98.6	1523	4990
38	100.4	1525	4997
39	102.2	1527	5010
40	104.0	1528	5013
41	105.8	1530	5020
42	107.6	1532	5026
43	109.4	1534	5033
44	111.2	1535	5036
45	113.0	1536	5040
46	114.8	1538	5046
47	116.6	1538	5049
48	118.4	1540	5053
49	120.2	1541	5056
50	122.0	1543	5063
51	123.8	1543	5063
52	125.6	1544	5066
53	127.4	1545	5069
54	129.2	1546	5072
55	131.0	1547	5076
56	132.8	1548	5079
57	134.6	1548	5079
58	136.4	1548	5079
59	138.2	1550	5086
60	140.0	1550	5086
61	141.8	1551	5089
62	143.6	1552	5092
63	145.4	1552	5092
64	147.2	1553	5092
65	149.0	1553	5095
66	150.8	1553	5095
67	152.6	1554	5099
68	154.4	1554	5099
69	156.2	1554	5099
70	158.0	1554	5099
71	159.8	1554	5099
72	161.6	1555	5102
73	163.4	1555	5102
74	165.2	1555	5102
75	167.0	1555	5102
76	167.0	1555	5102
77	170.6	1554	5099
78	172.4	1554	5099
79	174.2	1554	5099
80	176.0	1554	5099
81	177.8	1554	5099
82	179.6	1553	5095
83	181.4	1553	5095
84	183.2	1553	5095
85	185.0	1552	5092
86	186.8	1552	5092

87	188.6	1552	5092
88	190.4	1551	5089
89	192.2	1551	5089
90	194.0	1550	5086
91	195.8	1549	5082
92	197.6	1549	5082
93	199.4	1548	5079
94	201.2	1547	5076
95	203.0	1547	5076
96	204.8	1546	5072
97	206.6	1545	5069
98	208.4	1544	5066
99	210.2	1543	5063
100	212.0	1543	5063
104	220.0	1538	5046
110	230.0	1532	5026
116	240.0	1524	5000
121	250.0	1516	5007
127	260.0	1507	4944
132	270.0	1497	4912
138	280.0	1487	4879
143	290.0	1476	4843
149	300.0	1465	4807
154	310.0	1453	4767
160	320.0	1440	4725
166	330.0	1426	4679
171	340.0	1412	4633
177	350.0	1398	4587
182	360.0	1383	4538
188	370.0	1368	4488
193	380.0	1353	4439
199	390.0	1337	4387
204	400.0	1320	4331
210	410.0	1302	4272
216	420.0	1283	4210
221	430.0	1264	4147
227	440.0	1244	4082
232	450.0	1220	4003
238	460.0	1200	3937
243	470.0	1180	3872
249	480.0	1160	3806
254	490.0	1140	3740
260	500.0	1110	3642

9 Specification

General

Measuring principle : Ultrasonic time difference correlation principle

Flow velocity range : 0.01 ... 25 m/s

Resolution : 0.25 mm/s

Repeatability : 0.15 % of measured value ± 0.015 m/s

Accuracy :

Volume flow

$\pm 1 \dots 3$ % of measured value depending on application,

± 0.5 % of measured value with process calibration

Flow velocity

± 0.5 % of measured value

Turn down ratio : 1/100

Gaseous and solid content of liquid media : < 10 % of volume

Flowmeter

Manufacturer	Katronic Technologies Ltd. Earls Court, 13 Warwick Street Earlsdon Coventry CV5 6ET UNITED KINGDOM
	Quintex GmbH D-97922 Lauda-Königshofen GERMANY
Marking	<i>Gas groups</i> II 2G Ex db eb IIA/IIB T6
Certificate number	EPS 11 ATEX 1355 X
Degree of protection	IP66 according to EN 60529
Temperature limits	Temperature class T6: -20 ... +60 °C

Flow channels : 1 or 2

Power supply : 100 ... 240 V AC 50/60 Hz,

9 ... 36 V DC, special versions on request

Display : LCD graphic display, 128 x 64 dots, backlit

Dimensions : H 237 x W 258 x D 146 mm without cable glands

Weight : Approx. 2.3 kg

Power consumption : < 10 W

Signal damping : 0 ... 99 s

Measurement rate : 1Hz standard, higher rates on application

Operating languages : English, 2 other (as requested and subject to availability)

Response time : 1 s, faster rates upon request

Calculation functions : Average/difference/sum

Quantity and units of measurement

Volumetric flow rate : m³/h, m³/min, m³/s, l/h, l/min, l/s, USgal/h (US gallons per hour), USgal/min, USgal/s, bbl/d (barrels per day), bbl/h, bbl/min, bbl/s.

Flow velocity : m/s, ft/s, inch/s

Mass flow rate : g/s, t/h, kg/h, kg/min

Volume : m³, l, gal (US gallons), bbl

Mass : g, kg, t

Heat flow : W, kW, MW (only with heat quantity measurement option)

Heat quantity : J, kJ, MJ (only with heat quantity measurement option)

Sig dB (signal), noise dB, SNR,

C m/s (sound speed), CU (housing temperature)

Tin, Tout (inlet and outlet temperature)

Internal data logger

Storage capacity : In excess of 1 million data points (16MB)

Logging data : Up to ten selected variables

Communication

Serial interface : RS 232, RS 485 (optional)

Data : Instantaneous measured value, parameter set and configuration, logged data

KATdata+ Software

Functionality : Downloading of measured values/parameter sets, graphical presentation, list format, export to third party software, on-line transfer of measured data

Operating systems : Windows 2000, NT, XP, Vista, 7; Linux; Mac (optional)

**Process inputs / Process Outputs
(maximum of five per instrument)**Inputs

Temperature : PT 100, three or four-wire circuit, measuring range - 50 ... 400 °C, resolution 0.1K, accuracy ±0.2 K

Current : 0 ... 20 mA active or 4 ... 20 mA passive, U = 30 V, R_i = 50 Ohm, accuracy 0.1 % of MVOutputsCurrent : 0/4 ... 20 mA, active (R_{Load} < 500 Ohm), 16 bit resolution, U = 30 V, accuracy = 0.1 %Voltage : On request, 0 ... 10 V, R_i = 500 Ohm

Frequency : On request

Digital (Optical - Open Collector) : U = 24 V, I_{max} = 4 mADigital (relay) : Form C (SPDT-CO) contacts, U = 48 V, I_{max} = 250 mA**Clamp-on sensors**

Manufacturer	Katronic Technologies Ltd. Earls Court, 13 Warwick Street Earlsdon Coventry CV5 6ET UNITED KINGDOM
Marking	<i>Gas groups</i> II 2G Ex mb II T6 - T4 X <i>Dust groups</i> II 2D Ex mbD 21 IP68 T80°C - T120°C X
Certificate number	TRAC 09 ATEX 21226X
Degree of protection	IP68 according to EN 60529
Temperature limits	Temperature class T4: -50 ... +115 °C Temperature class T5: -50 ... +90 °C Temperature class T6: -50 ... +75 °C

Diameter range :

Type K4Ex: 10 ... 250 mm

Type K1Ex: 50 ... 3000 mm

Dimensions : 60 x 30 x 34 mm

Material : Stainless steel

Protection method : Encapsulation

10 Index

Acoustic coupling gel	22	Negative separation distance	16
Analogue current input	39	Outer Diameter	27
Analogue current output	37	Output Configuration	36
Analogue frequency output	37	Output settings	36
Analogue voltage output	37	Packaging	12
Approvals	9	Passes	27
Cable glands	20	Pipe material selection	26
Certificate of Conformity	53	Pipe parameters	27
Commissioning	31	Pipe preparation	16
Customer Return Note (CRN)	54	Pole mounting	17
Datalogger	30	Process value	28
Diagnostic displays	29	PT100 inputs	38
Diagnostics	35	Quick Start	26
Diagonal mode	16	Reflection mode	16
Digital open collector output	38	Relay output	38
Digital relay output	34	Retaining clip (sensor mounting)	23
Dimensions	18	Return Policy	6
Display	25	RS 232	36
Display icons	25	Safety	5
Display settings	35	Scope function	40
Disturbance sources	13	Sensor configuration	16
Dual channel calculations	39	Sensor Location	12
Dual channel display mode	29	Sensor mounting	21
Electrical connections	19	Sensor mounting fixtures	23
Equipotential bonding	21	Sensor placement screen	28
Error messages	42	Sensor Separation	16
Fluid selection	27	Serial interface	36
Fluid temperature	27	Setup Wizard	26
HART compatible output	36	SOS (Speed of Sound)	39
Identification of components	8	Sound passes	27
Input configuration	38	Sound velocity measurement	39
Installation	8	Specification	50
Junction box	20	Storage	12
Keypad	24	Switching on / off	24
Keypad function	24	System configuration	9
Legislative requirements	7	Temperature compensation	39
Liner material	27	Temperature limits	11
Maintenance	41	Three line display	28
Math display	30	Totalizer	29
Maths functions	39	Transit-time method	8
Measurements	28	Troubleshooting	42
Measuring principle	8	Units of measurement	26
Menu structure	31	Wall thickness	27
MODBUS	36	Warranty	6
Multiple sensors	9	Wizard (quick setup)	26

Appendix A



Katronic Technologies Ltd.

Earls Court
Earlsdon, Coventry
CV5 6ET
United Kingdom

Phone +44 (0)2476 714111
Fax +44 (0)2476 715446

Website www.katronic.co.uk
E-mail mail@katronic.co.uk

Declaration of Conformity

We, Katronic Technologies Ltd., declare under our sole responsibility that the products listed below to which this declaration relates are in conformity with the EEC directives:

**EMC Directive 2004/108/EC for Electromagnetic Compatibility
Low Voltage Directive 2006/95/EC for Electrical Safety**

Description of products:

Ultrasonic flowmeters KATflow 100, 150, 170, 200 and 230 with associated KATRONIC transducers

The mentioned products are in conformity with the following European Standards:

Class	Standard	Description
EMC Directive	BS EN 61326-1:2006	Electrical equipment for measurement, control and laboratory use - EMC requirements
Immunity	BS EN 61326-1:2006 BS EN 61000-4-2:1995 BS EN 61000-4-3:2006 BS EN 61000-4-4:2004 BS EN 61000-4-5:2006 BS EN 61000-4-6:2009 BS EN 61000-4-11:2004	Electrical equipment for continuous unattended use Electrostatic discharge RF field Electric fast transient/burst Surge RF conducted AC mains voltage dips and interruption
Emission	BS EN 61326-1:2006 BS EN 55022:2010	Electrical equipment Class B Disturbance voltage Class B
Low Voltage Directive	BS EN 61010-1:2010	Safety requirements for electrical equipment for measurement, control and laboratory use

Coventry, 31 August 2012

For and on behalf of Katronic Technologies Ltd.

Andrew Sutton
Managing Director



Reg. No. GB03/58999

Registered in England No. 3298028 • Registered Office as above

Appendix B

Customer Return Note (CRN)



Company

Address

Name

Tel. No.

E-mail

Instrument model

Katronic contract no.

Serial number

(if known)

Sensor type(s)

Sensor serial
number(s)

The enclosed instrument has been used in the following environment (please ✓):

Nuclear radiation

Water-endangering

Toxic

Caustic

Biological

Other (please specify)

We confirm (delete if not applicable)*

- *that we have checked the instrument and sensors are free of any contamination*,*
- *neutralised, flushed and decontaminated all parts which have been in contact with hazardous substances and/or environments*,*
- *that there is no risk to man or environment through any residual material.*

Date

Signature

Company stamp